

VISUALDSP++TM

Kernel (VDK)TM

User's Guide

First Revision, April 2001

Part Number
82-000349-03

Analog Devices, Inc.
Digital Signal Processor Division
One Technology Way
Norwood, Mass. 02062-9106



Copyright Information

©1996–2001 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

Disclaimer

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

Trademark and Service Mark Notice

The Analog Devices logo, SHARC, the SHARC logo, TigerSHARC, the TigerSHARC logo, and EZ-LAB are registered trademarks; VisualDSP++, the VisualDSP++ logo, VDK, Apex-ICE, Mountain-ICE, Summit-ICE, Trek-ICE, and The DSP Collaborative are trademarks of Analog Devices, Inc.

Microsoft and Windows are registered trademarks and Windows NT is a trademark of Microsoft Corporation.

Adobe and Acrobat are registered trademarks of Adobe Corporation.

All other brand and product names are trademarks or service marks of their respective owners.

Rev. 1.0

CONTENTS

INTRODUCTION

For Additional Information About Analog Products	1-2
For Technical or Customer Support	1-2
Purpose of this Manual	1-3
Intended Audience	1-3
Manual Contents Description	1-4
What's New in this Manual	1-5
Related Documents	1-5
Conventions	1-6

OPERATING SYSTEM KERNEL CONCEPTS

In This Chapter	2-1
Motivation	2-2
Rapid Application Development	2-2
Debugged Control Structures	2-2
Code Reuse	2-3
Hardware Abstraction	2-4

CONTENTS

Partitioning an Application	2-5
Scheduling	2-6
Priorities	2-8
Pre-emption	2-8
Protected Regions	2-9
Disabling Scheduling	2-9
Disabling Interrupts	2-9
Thread and Hardware Interaction	2-11
Thread Domain with Software Scheduling	2-11
Interrupt Domain with Hardware Scheduling	2-12
Device Drivers	2-12

CONFIGURING A PROJECT TO USE THE VDK

In This Chapter	3-1
Configuring a Project	3-2
Linker Description File	3-2
Thread Safe Libraries	3-2
Header Files for the VDK API	3-3
VDK Program Development	3-3
Step 1: Start a New Project File	3-4
To Create a VDK-Enabled Project	3-4
Step 2: Modify VDK System Parameters	3-8
To View and/or Modify System Parameters	3-8
Step 3: Add and Edit a Thread Type	3-10
To Add a New Thread Type to the Project	3-10

To View/Modify a Thread Type's Properties	3-12
To Delete a Thread Type from the Project	3-13
Step 4: Add and Edit a Boot Thread	3-14
To Add a New Boot Thread to the Project	3-14
To View/Modify a Boot Thread's Properties	3-15
To Rename a Boot Thread	3-16
To Delete a Boot Thread from the Project	3-16
To Change the Order in which Boot Threads are Created ...	3-17
Step 5: Add and Edit a Round-Robin Priority	3-18
To Add a Round-Robin Priority to the Project	3-18
To View/Modify a Round-Robin's Priorities	3-20
To Modify a Round-Robin Priority	3-21
To Delete a Round-Robin Priority from the Project	3-21
Step 6: Add and Edit a Semaphore	3-22
To Add a Semaphore to the Project	3-22
To View/Modify a Semaphore's Properties	3-23
To Rename a Semaphore	3-24
To Delete a Semaphore from the Project	3-24
Step 7: Add and Edit an Event Bit	3-25
To Add an Event Bit to the Project:	3-25
To View/Modify an Event Bit's Properties	3-26
To Rename an Event Bit	3-27
To Delete an Event Bit from the Project	3-27
Step 8: Add and Edit an Event	3-28

CONTENTS

To Add an Event to the Project	3-28
To View/Modify an Event's Properties	3-29
To Rename an Event	3-30
To Delete an Event from the Project	3-30
To Add Event Bits to an Event	3-31
To View/Modify a Dependent Event Bit's Condition	3-33
Step 9: Add and Edit an Interrupt	3-34
To Add an Interrupt to the Project	3-34
To View/Modify an Interrupt's Properties	3-36
To Delete an Interrupt from the Project	3-37
Step 10: Add and Edit a Device Driver	3-38
To Add a Device Driver to the Project	3-38
To View/Modify a Device Driver's Properties	3-40
To Delete a Device Driver from the Project	3-41
To Add Device Flags to a Device Driver	3-42
Debugging a VDK Project	3-44
Instrumented Build Info	3-44
State History Window	3-44
Thread Status and Thread Event Windows	3-46
Window Operations	3-47
Target Load Graph	3-48
VDK Status Window	3-49
General Tips	3-50

USING THE VDK

In This Chapter	4-1
Threads	4-2
Thread Types	4-2
Thread Parameters	4-2
Required Thread Functionality	4-3
Writing Threads in Different Languages	4-6
Global Variables	4-7
Error Handling Facilities	4-8
Scheduling	4-9
Ready Queue	4-9
Scheduling Methodologies	4-9
Cooperative Scheduling	4-10
Round-Robin Scheduling	4-10
Pre-Emptive Scheduling	4-10
Disabling Scheduling	4-11
Entering the Scheduler from API Calls	4-12
Entering the Scheduler from Interrupts	4-12
Idle Thread	4-14
Signals	4-16
Semaphores	4-16
Behavior of Semaphores	4-16
Thread's Interaction with Semaphores	4-17
Events and Event Bits	4-19

CONTENTS

Behavior of Events	4-20
Thread's Interaction with Events	4-22
Device Flags	4-24
Behavior of Device Flags	4-24
Thread's Interaction with Device Flags	4-24
Interrupt Service Routines	4-26
Disabling Interrupts	4-26
Interrupt Architecture	4-26
Vector Table	4-27
Global Data	4-27
Communication with the Thread Domain	4-28
Timer ISR	4-29
Reschedule ISR	4-29
Device Drivers	4-30
Execution	4-30
Dispatch Function	4-31
Device Flags	4-37
Pending on a Device Flag	4-37
Posting a Device Flag	4-38
General Notes	4-39
Variables	4-39
Notes on Critical/Unscheduled Regions	4-39

DATA TYPES

In This Chapter	5-1
Bitfield	5-3
DeviceDescriptor	5-4
DeviceDispatchID	5-5
DeviceDispatchUnion	5-6
DeviceFlagID	5-8
EventBitID	5-9
EventID	5-9
EventData	5-10
Priority	5-11
SemaphoreID	5-12
ThreadID	5-12
ThreadStatus	5-13
ThreadType	5-14
Ticks	5-15
SystemError	5-16
VersionStruct	5-18

API REFERENCE

In This Chapter	6-1
Calling Library Functions	6-2
Linking Library Functions	6-2
Working With VDK Library Header	6-2

CONTENTS

Passing Function Parameters	6-3
Library Naming Conventions	6-4
Documented Library Functions	6-5
Description Format	6-9
ClearEventBit	6-10
ClearThreadError	6-11
CloseDevice	6-12
CreateThread	6-13
DestroyThread	6-14
DeviceIOCtl	6-15
DispatchThreadError	6-16
FreeDestroyedThreads	6-17
GetEventBitValue	6-18
GetEventData	6-19
GetEventValue	6-20
GetLastThreadError	6-21
GetLastThreadErrorValue	6-22
GetPriority	6-23
GetSemaphoreValue	6-24
GetThreadHandle	6-25
GetThreadID	6-26
GetThreadStatus	6-27
GetThreadType	6-28
GetUptime	6-29

GetVersion	6-30
LogHistoryEvent	6-31
LoadEvent	6-32
MakePeriodic	6-33
OpenDevice	6-35
PendDeviceFlag	6-36
PendEvent	6-37
PendSemaphore	6-39
PopCriticalRegion	6-41
PopNestedCriticalRegions	6-42
PopNestedUnscheduledRegions	6-43
PopUnscheduledRegion	6-44
PostDeviceFlag	6-45
PostSemaphore	6-46
PushCriticalRegion	6-47
PushUnscheduledRegion	6-48
RemovePeriodic	6-50
ResetPriority	6-51
Sleep	6-52
SetEventBit	6-53
SetPriority	6-54
SetThreadError	6-55
SyncRead	6-56
SyncWrite	6-57

CONTENTS

Yield	6-58
Assembly Macros	6-59
VDK_ISR_ACTIVATE_DEVICE_DRIVER_	6-60
VDK_ISR_CLEAR_EVENTBIT_	6-61
VDK_ISR_LOG_HISTORY_EVENT_	6-62
VDK_ISR_POST_SEMAPHORE_	6-63
VDK_ISR_SET_EVENTBIT_	6-64

GLOSSARY

INDEX