

VISUALDSP++™ 2.0

Linker & Utilities Manual for TigerSHARC DSPs

Third Revision, July 2001

Part Number
82-001985-02

Analog Devices, Inc.
Digital Signal Processor Division
One Technology Way
Norwood, Mass. 02062-9106

a

Copyright Information

©1996–2000 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

Disclaimer

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

Trademark and Service Mark Notice

The Analog Devices logo, VisualDSP, the VisualDSP logo, SHARC, and the SHARC logo are registered trademarks;

VisualDSP++, the VisualDSP++ logo, CROSSCORE, the CROSSCORE logo, TigerSHARC, the TigerSHARC logo, Blackfin, the Blackfin logo, EZ-KIT Lite, Apex-ICE, Mountain-ICE, Summit-ICE, Trek-ICE, and The DSP Collaborative are trademarks of Analog Devices, Inc.

Microsoft and Windows are registered trademarks and Windows NT is a trademark of Microsoft Corporation.

Adobe and Acrobat are registered trademarks of Adobe Corporation.

Intel is registered trademark of Intel Corporation.

All other brand and product names are trademarks or service marks of their respective owners.

Rev. 3.0

CONTENTS

INTRODUCTION

For More Information About Analog Products	1-2
For Technical or Customer Support	1-2
Purpose of This Manual	1-3
Intended Audience	1-3
Manual Contents Description	1-4
Related Documents	1-5
Conventions	1-6

LINKER

Overview	2-1
Mapping Files To Memory With An LDF	2-3
Default LDF and Object Code Placement	2-3
Inputs—C/C++ and Assembly Sources	2-4
Outputs—DSP Executables	2-6
The Linking Process and the LDF	2-8
Linker Guide	2-13
Describing the Link Target	2-14
Internal Memory	2-14

CONTENTS

Writing a Linker MEMORY Command	2-15
Memory Map	2-16
Placing Code on the Link Target	2-20
Using Link Features	2-22
Setting Linker Options	2-23
Interpreting Link Errors	2-23
Linker Command-Line Reference	2-25
Command-Line Syntax	2-25
Object Files in the Linker Command Line	2-26
Switch Format in the Linker Command Line	2-27
Filenames on the Linker Command Line	2-28
Linker Command-Line Options	2-29
Linker Switch Option Descriptions	2-32
Linker Description File Reference	2-38
LDF Structure	2-39
Command Scoping	2-39
LDF Expressions and Conventions	2-40
Linker Keywords	2-42
Miscellaneous LDF Keywords	2-44
LDF Operators	2-44
LDF Macros	2-47
LDF Macro List	2-48
LDF Macros & Command Line Interaction	2-50
LDF Commands	2-51

ARCHITECTURE()	2-52
INCLUDE()	2-52
LINK_AGAINST()	2-53
MAP()	2-53
MEMORY{}	2-54
MPMEMORY{}	2-56
OVERLAY_GROUP{}	2-57
PACKING()	2-60
PLIT{}	2-61
PROCESSOR{}	2-64
SEARCH_DIR()	2-66
SECTIONS{}	2-67
SHARED_MEMORY{}	2-73
LDF Programming Examples	2-76
Linking for Single-Processor Memory	2-77
Linking Large Uninitialized Variables	2-79
Linking for Multi-Processor and Shared Memory	2-80
Linking for Overlay Memory	2-86
Using a Procedure Linkage Table	2-90
Using An Overlay Memory Manager	2-95
Managing Overlays	2-97
Managing Two Overlays	2-102
Reducing Overlay Manager Overhead	2-107
Linker Glossary	2-112

CONTENTS

ARCHIVER

Overview	3-1
Archiver Guide	3-2
Creating Archives in VisualDSP++ Environment	3-3
Filename Conventions	3-3
Making Archived Functions Usable	3-4
Writing Archive Routines: Creating Entry Points	3-4
Using Archive Routines	3-5
Archiver Command-Line Reference	3-6
Archiver Command-Line Syntax	3-6
Archiver File Search	3-8
Archiver Command-Line Options	3-8
Archiver Glossary	3-10

LOADER

Overview	4-1
Loader Guide	4-2
Working With Different Boot Types	4-3
Boot-Kernel Features & Boot-Loading Process	4-4
Boot-Kernel Changes and Software Issues	4-5
Setting Loader Options	4-5
Loader Command-Line Reference	4-6
Loader Command-Line Syntax	4-6
Loader Command-Line Switches	4-9

Loader Glossary	4-12
-----------------------	------

FILE FORMATS

Source Files	A-2
C/C++ Source Files (.C, .CPP, .CXX)	A-2
Assembly Source Files (.ASM)	A-3
Assembly Initialization Data Files (.DAT)	A-3
Preprocessor Header Files (.H)	A-4
Linker Description Files (.LDF)	A-5
Linker Command Line Files (.TXT)	A-5
Build (Processed) Files	A-6
Assembler Object Files (.DOJ)	A-6
Archiver Archive Files (.DLB)	A-6
Linker Executable Files (.DXE, .SM, .OVL, .DLO)	A-7
Linker Memory Map Files (.MAP)	A-7
Loader Hex Format Files (.LDR)	A-7
Loader ASCII Format Files (.LDR)	A-9
Loader Include Format Files (.LDR)	A-9
Loader Binary Format Files (.LDR)	A-10
Debugger Files	A-11
Format References	A-12

CONTENTS

UTILITIES

Overview	B-1
Dumper — ELF File Dumper	B-1
Using the Archiver and Dumper For Disassembly	B-3
Dumping Overlay Archive Files	B-4

INDEX