

VISUALDSP++TM 3.0

Assembler and Preprocessor Manual

for TigerSHARC[®] DSPs

Revision 1.0, October 2002

Part Number
82-000336-04

Analog Devices, Inc.
Digital Signal Processor Division
One Technology Way
Norwood, Mass. 02062-9106



Copyright Information

© 2002 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

Disclaimer

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

Trademark and Service Mark Notice

The Analog Devices logo, VisualDSP, the VisualDSP logo, SHARC, the SHARC logo, TigerSHARC, and the TigerSHARC logo are registered trademarks of Analog Devices, Inc.

VisualDSP++, the VisualDSP++ logo, CROSSCORE, the CROSSCORE logo, Blackfin, the Blackfin logo, and EZ-KIT Lite are trademarks of Analog Devices, Inc.

All other brand and product names are trademarks or service marks of their respective owners.

CONTENTS

PREFACE

Purpose	xi
Intended Audience	xi
Manual Contents	xii
What's New in this Manual	xii
Technical or Customer Support	xiii
Supported Processors	xiii
Product Information	xiv
MyAnalog.com	xiv
DSP Product Information	xiv
Related Documents	xv
Online Documentation	xvi
From VisualDSP++	xvi
From Windows	xvii
From the Web	xvii
Printed Manuals	xviii
VisualDSP++ Documentation Set	xviii
Hardware Manuals	xviii
Data Sheets	xviii

CONTENTS

Contacting DSP Publications	xix
Notation Conventions	xix

ASSEMBLER

Assembler Guide	1-2
Assembler Overview	1-3
Writing Assembly Programs	1-3
Program Content	1-5
Program Structure	1-7
Program Interfacing Requirements	1-12
Using Assembler Support for C Structs	1-13
Preprocessing a Program	1-14
Using Assembler Feature Macros	1-15
Make Dependencies	1-16
Reading a Listing File	1-18
Assembler Syntax Reference	1-19
Assembler Keywords and Symbols	1-19
Assembler Expressions	1-27
Assembler Operators	1-28
Numeric Formats	1-30
Fractional Type Support	1-30
1.31 Fracts	1-31
1.0r Special Case	1-32
Fractional Arithmetic	1-32
Mixed Type Arithmetic	1-32

Comment Conventions	1-33
Conditional Assembly Directives	1-33
C Struct Support in Assembly Built-ins	1-35
OFFSETOF() Built-In	1-35
SIZEOF() Built-In	1-36
-> Struct References	1-37
Assembler Directives	1-39
.ALIGN, Specify an Address Alignment	1-42
.ALIGN_CODE, Specify an Address Alignment	1-44
.EXTERN, Refer to a Globally Available Symbol	1-45
.EXTERN STRUCT, Refer to a Struct Defined Elsewhere	1-46
.FILE, Override the Name of a Source File	1-48
.GLOBAL, Make a Symbol Globally Available	1-49
.IMPORT, Provide Structure Layout Information	1-50
.LEFTMARGIN, Set the Margin Width of a Listing File	1-52
.LIST/.NOLIST, Listing Source Lines and Opcodes	1-53
.LIST_DATA/.NOLIST_DATA, Listing Data Opcodes	1-54
.LIST_DATFILE/.NOLIST_DATFILE, Listing Data Initialization Files	1-55
.LIST_DEFTAB, Set the Default Tab Width for Listings ...	1-56
.LIST_LOCTAB, Set the Local Tab Width for Listings	1-57
.LIST_WRAPDATA/.NOLIST_WRAPDATA	1-58
.NEWPAGE, Insert a Page Break in a Listing File	1-59
.PAGELENGTH, Set the Page Length of a Listing File	1-60
.PAGEWIDTH, Set the Page Width of a Listing File	1-61

CONTENTS

.PREVIOUS, Revert to the Previously Defined Section	1-62
.SECTION, Declare a Memory Section	1-64
.STRUCT, Create a Struct Variable	1-66
.TYPE, Change Default Symbol Type	1-70
.VAR, Declare a Data Variable or Buffer	1-71
.VAR and ASCII String Initialization Support	1-73
.WEAK, Support a Weak Symbol Definition and Reference	1-75
Assembler Command-Line Reference	1-76
Running the Assembler	1-77
Assembler Command-Line Switch Summary	1-79
Assembler Command-Line Switch Descriptions	1-81
-align-branch-lines	1-81
-char-size-8	1-82
-char-size-32	1-82
-char-size-any	1-82
-default-branch-np	1-82
-default-branch-p	1-83
-Dmacro[=definition]	1-83
-double-size-32	1-83
-double-size-64	1-83
-double-size-any	1-84
-flags-compiler	1-84
User-Specified Defines Options	1-84
-flags-pp -opt1 [-opt2...]	1-85

-g	1-85
-h[elp]	1-85
-i I directory	1-85
-l filename	1-86
-li filename	1-86
-M	1-87
-MM	1-87
-Mo filename	1-88
-Mt filename	1-88
-o filename	1-88
-pp	1-89
-proc processor	1-89
-sp	1-89
-v[erbose]	1-90
-version	1-90
-w	1-90
-Wnumber[,number]	1-90
Specifying Assembler Options in VisualDSP++	1-90

PREPROCESSOR

Preprocessor Guide	2-2
Writing Preprocessor Commands	2-3
Header Files	2-4
Writing Macros	2-5
Using Predefined Macros	2-7

CONTENTS

Specifying Preprocessor Options	2-9
Preprocessor Command Reference	2-10
Preprocessor Commands and Operators	2-10
#define	2-12
Variable Length Argument Definitions	2-13
#elif	2-15
#else	2-16
#endif	2-17
#error	2-18
#if	2-19
#ifdef	2-20
#ifndef	2-21
#include	2-22
#line	2-23
#pragma	2-24
#undef	2-25
#warning	2-26
# (Argument)	2-27
## (Concatenate)	2-28
? (Generate a Unique Label)	2-29
Preprocessor Command-Line Reference	2-31
Running the Preprocessor	2-31
Preprocessor Command-Line Switches	2-32
-cpredef	2-33

-cs!	2-33
-cs/*	2-34
-cs//	2-34
-cs{	2-34
-csall	2-34
-Dmacro[=def]	2-34
-h[elp]	2-35
-i Idirectory	2-35
-M	2-35
-MM	2-36
-Mo filename	2-36
-Mt filename	2-36
-o filename	2-37
-stringize	2-37
-v[erbose]	2-37
-version	2-37

INDEX

PREFACE

Thank you for purchasing Analog Devices development software for digital signal processor (DSPs) applications.

Purpose

The *VisualDSP++ 3.0 Assembler and Preprocessor Manual for TigerSHARC* DSPs contains information about the assembler for TigerSHARC® (ADSP-TSxxx) DSPs which set a new standard of performance for digital signal processors, combining multiple computation units for floating-point and fixed-point processing as well as wide word widths

The manual provides information on how to write assembly programs for TigerSHARC DSPs and reference information about related development software. It also provides information on new and legacy syntax for assembler and preprocessor directives and comments, as well as command-line switches.

Intended Audience

The primary audience for this manual is DSP programmers who are familiar with Analog Devices DSPs. This manual assumes that the audience has a working knowledge of the appropriate DSP architecture and instruction set. Programmers who are unfamiliar with TigerSHARC DSPs can use this manual, but they should supplement it with other texts (such as the appropriate *Hardware Reference* and *Programming Reference* manuals) that describe your target architecture.

Manual Contents

The manual consists of:

- Chapter 1, “[Assembler](#)”

Provides an overview of the process of writing and building assembly programs. It also provides information about the assembler’s switches, expressions, keywords, and directives.

- Chapter 2, “[Preprocessor](#)”

Provides procedures for using preprocessor commands within assembly source files as well as the preprocessor’s command-line interface options and command sets.

What’s New in this Manual

In addition to documenting all existing TigerSHARC assembler and preprocessor features, this manual describes new directives, switches, and commands, including syntax and code examples. In particular, it includes new sections on C structures and reference syntax and conditional assembly.

This assembler release provides several new keywords, built-ins, and directives. For example, the new assembler command-line switches are `-align-branch-lines`, `-char-size-8|32`, `-char-size-any`, `-default-branch-np`, `-default-branch-p`, `-double-size-32|64`, `-double-size-any`, `-flags-compiler`, `-flags-pp`, `-proc processorID`, and `-Wnumber`. Also new are the preprocessor `#pragma` command and the `"?"` and `...` operators.

The `Precision`, `Round` and `Size` assembler directives and the `-TSxxx` assembler switches are removed from the manual. Refer to the *VisualDSP++ 3.0 Product Bulletin for TigerSHARC DSPs* for a complete list of new assembler features and enhancements.

Technical or Customer Support

You can reach DSP Tools Support in the following ways:

- Visit the DSP Development Tools website at
www.analog.com/technology/dsp/developmentTools/index.html
- Email questions to
dsptools.support@analog.com
- Phone questions to **1-800-ANALOGD**
- Contact your ADI local sales office or authorized distributor
- Send questions by mail to:

Analog Devices, Inc.
One Technology Way
P.O. Box 9106
Norwood, MA 02062-9106
USA

Supported Processors

The name “TigerSHARC” refers to a family of Analog Devices, Inc. floating-point and [8-bit, 16-bit and 32-bit] fixed-point processors. VisualDSP++ currently supports the following TigerSHARC processors:

- ADSP-TS101 DSP
- ADSP-TS201 DSP

Product Information

You can obtain product information from the Analog Devices website, from the product CD-ROM, or from the printed publications (manuals).

Analog Devices is online at www.analog.com. Our website provides information about a broad range of products—analog integrated circuits, amplifiers, converters, and digital signal processors.

MyAnalog.com

MyAnalog.com is a free feature of the Analog Devices website that allows customization of a webpage to display only the latest information on products you are interested in. You can also choose to receive weekly email notification containing updates to the webpages that meet your interests. MyAnalog.com provides access to books, application notes, data sheets, code examples, and more.

Registration:

Visit www.myanalog.com to sign up. Click **Register** to use MyAnalog.com. Registration takes about five minutes and serves as means for you to select the information you want to receive.

If you are already a registered user, just log on. Your user name is your email address.

DSP Product Information

For information on digital signal processors, visit our website at www.analog.com/dsp, which provides access to technical publications, data sheets, application notes, product overviews, and product announcements.

You may also obtain additional information about Analog Devices and its products in any of the following ways.

- Email questions or requests for information to dsp.support@analog.com
- Fax questions or requests for information to
1-781-461-3010 (North America)
089/76 903-557 (Europe)
- Access the Digital Signal Processing Division's FTP website at
[ftp ftp.analog.com](ftp://ftp.analog.com) or **ftp 137.71.23.21**
<ftp://ftp.analog.com>

Related Documents

For information on product related development software, see the following publications:

VisualDSP++ 3.0 Getting Started Guide for TigerSHARC DSPs

VisualDSP++ 3.0 User's Guide for TigerSHARC DSPs

VisualDSP++ 3.0 C/C++ Compiler and Library Manual for TigerSHARC DSPs

VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs

VisualDSP++ 3.0 Product Bulletin for TigerSHARC DSPs

VisualDSP++ Kernel (VDK) User's Guide

VisualDSP++ Component Software Engineering User's Guide

Quick Installation Reference Card

For hardware information, refer to your DSP's *Hardware Reference*, *Programming Reference*, and data sheet. All documentation is available online. Most documentation is available in printed form.

Online Documentation

Online documentation comprises Microsoft HTML Help (.CHM), Adobe Portable Documentation Format (.PDF), and HTML (.HTM and .HTML) files. A description of each file type is as follows.

File	Description
.CHM	VisualDSP++ online Help system files and VisualDSP++ manuals are provided in Microsoft HTML Help format. Installing VisualDSP++ automatically copies these files to the VisualDSP\Help folder. Online Help is ideal for searching the entire tools manual set. Invoke Help from the VisualDSP++ Help menu or via the Windows Start button.
.PDF	Manuals and data sheets in Portable Documentation Format are located in the installation CD's Docs folder. Viewing and printing a .PDF file requires a PDF reader, such as Adobe Acrobat Reader (4.0 or higher). Running setup.exe on the installation CD provides easy access to these documents. You can also copy .PDF files from the installation CD onto another disk.
.HTM or .HTML	Dinkum Abridged C++ library and FlexLM network license manager software documentation is located on the installation CD in the Docs\Reference folder. Viewing or printing these files requires a browser, such as Internet Explorer 4.0 (or higher). You can copy these files from the installation CD onto another disk.

Access the online documentation from the VisualDSP++ environment, Windows[®] Explorer, or Analog Devices Web site.

From VisualDSP++

VisualDSP++ provides access to online Help. It does not provide access to .PDF files or the supplemental reference documentation (Dinkum Abridged C++ library and FlexLM network licence). Access Help by:

- Choosing **Contents**, **Search**, or **Index** from the VisualDSP++ **Help** menu
- Invoking context-sensitive Help on a user interface item (toolbar button, menu command, or window)

From Windows

In addition to shortcuts you may construct, Windows provides many ways to open VisualDSP++ online Help or the supplementary documentation.

Help system files (.CHM) are located in the `VisualDSP\Help` folder. Manuals and data sheets in PDF format are located in the `Docs` folder of the installation CD. The installation CD also contains the Dinkum Abridged C++ library and FlexLM network license manager software documentation in the `\Reference` folder.

Using Windows Explorer

- Double-click any file that is part of the VisualDSP++ documentation set.
- Double-click `vdsp-help.chm`, the master Help system, to access all the other .CHM files.

From the Web

To download the tools manuals, point your browser at www.analog.com/technology/dsp/developmentTools/gen_purpose.html

Select a DSP family and book title. Download archive (.ZIP) files, one for each manual. Use any archive management software, such as WinZip, to decompress downloaded files.

Product Information

Printed Manuals

For general questions regarding literature ordering, call the Literature Center at **1-800-ANALOGD (1-800-262-5643)** and follow the prompts.

VisualDSP++ Documentation Set

VisualDSP++ manuals may be purchased through Analog Devices Customer Service at **1-781-329-4700**; ask for a Customer Service representative. The manuals can be purchased only as a kit. For additional information, call **1-603-883-2430**.

If you do not have an account with Analog Devices, you will be referred to Analog Devices distributors. To get information on our distributors, log onto <http://www.analog.com/salesdir/continent.asp>.

Hardware Manuals

Hardware reference and instruction set reference manuals can be ordered through the Literature Center or downloaded from the Analog Devices website. The phone number is **1-800-ANALOGD (1-800-262-5643)**. The manuals can be ordered by a title or by product number located on the back cover of each manual.

Data Sheets

All data sheets can be downloaded from the Analog Devices website. As a general rule, any data sheet with a letter suffix (L, M, N) can be obtained from the Literature Center at **1-800-ANALOGD (1-800-262-5643)** or downloaded from the website. Data sheets without the suffix can be downloaded from the website only—no hard copies are available. You can ask for the data sheet by a part name or by product number.

If you want to have a data sheet faxed to you, the fax number for that service is **1-800-446-6212**. Follow the prompts and a list of data sheet code numbers will be faxed to you. Call the Literature Center first to find out if requested data sheets are available.

Contacting DSP Publications

Please send your comments and recommendations on how to improve our manuals and online Help. You can contact us by:

- E-mailing dsp.techpubs@analog.com
- Filling in and returning the attached Reader's Comments Card found in our manuals

Notation Conventions

The following table identifies and describes text conventions used in this manual.

 Additional conventions, which apply only to specific chapters, may appear throughout this document.

 Code has been formatted to fit this manual's page width.

Example	Description
Close command (File menu)	Text in bold style indicates the location of an item within the VisualDSP++ environment's menu system and user interface items.
{this that}	Alternative required items in syntax descriptions appear within curly brackets separated by vertical bars; read the example as <i>this</i> or <i>that</i> .
[this that]	Optional items in syntax descriptions appear within brackets and separated by vertical bars; read the example as an optional <i>this</i> or <i>that</i> .

Notation Conventions

Example	Description
[this,...]	Optional item lists in syntax descriptions appear within brackets delimited by commas and terminated with an ellipsis; read the example as an optional comma-separated list of <i>this</i> .
.SECTION	Commands, directives, keywords, and feature names are in text with <i>letter gothic font</i> .
<i>filename</i>	Non-keyword placeholders appear in text with italic style format.
	A note providing information of special interest or identifying a related topic. In the online version of this book, the word Note appears instead of this symbol.
	A caution providing information about critical design or programming issues that influence operation of a product. In the online version of this book, the word Caution appears instead of this symbol.

1 ASSEMBLER

This chapter provides information on how to use the assembler for developing and assembling programs for TigerSHARC (ADSP-TSxxx) DSPs.

The chapter contains:

- [“Assembler Guide” on page 1-2](#)
Describes the process of developing new programs in the TigerSHARC DSP assembly language
- [“Assembler Syntax Reference” on page 1-19](#)
Provides the assembler rules and conventions of syntax which is used to define symbols (identifiers), expressions, and to describe different numeric and comment formats
- [“Assembler Command-Line Reference” on page 1-76](#)
Provides reference information on the assembler’s switches and conventions

Assembler Guide

The `easmts.exe` assembler runs from the VisualDSP++ Integrated Debugging and Development Environment (IDDE) or from an operating system command line. The assembler processes assembly source, data, header files, and produces an object file. Assembler operations depend on two types of controls: assembler directives and assembler switches.

This section describes the process of developing new programs in the TigerSHARC DSPs assembly language. It provides information on how to assemble your programs from the operating system's command line.

Software developers using the assembler should be familiar with:

- [“Writing Assembly Programs” on page 1-3](#)
- [“Using Assembler Support for C Structs” on page 1-13](#)
- [“Preprocessing a Program” on page 1-14](#)
- [“Reading a Listing File” on page 1-18](#)
- [“Make Dependencies” on page 1-16](#)
- [“Specifying Assembler Options in VisualDSP++” on page 1-90](#)

For information about the DSP architecture, including the DSP instruction set used when writing the assembly programs, see the *Hardware Reference Manual* and *Instruction Set Manual* for an appropriate DSP.

Assembler Overview

The assembler processes data from assembly source (.ASM), data (.DAT), and include header (.H) files to generate object files in Executable and Linkable Format (ELF), an industry-standard format for binary object files. The object file name has a .DOJ extension.

In addition to the object file, the assembler can produce a listing file, which shows the correspondence between the binary code and the source.

Assembler switches are specified from the VisualDSP++ IDDE or in the command used to invoke the assembler. These switches allow you to control the assembly process of source, data, and header files. Use these switches to enable and configure assembly features, such as search paths, output file names, and macro preprocessing. See [“Assembler Command-Line Reference” on page 1-76](#).

You can also set assembler options via the **Assemble** tab of the VisualDSP++ **Project Options** dialog box (see [“Specifying Assembler Options in VisualDSP++” on page 1-90](#)).

Writing Assembly Programs

Assembler directives are coded in your assembly source file. The directives allow you to define variables, set up some hardware features, and identify program’s sections for placement within DSP memory. The assembler uses directives for guidance as it translates a source program into object code.

Write assembly language programs using the VisualDSP++ editor or any editor that produces text files. Do not use a word processor that embeds special control codes in the text. Use an .ASM extension to source file names to identify them as assembly source files.

[Figure 1-1](#) shows a graphical overview of the assembly process. The figure shows the preprocessor processing the assembly source (.ASM) and header (.h) files.

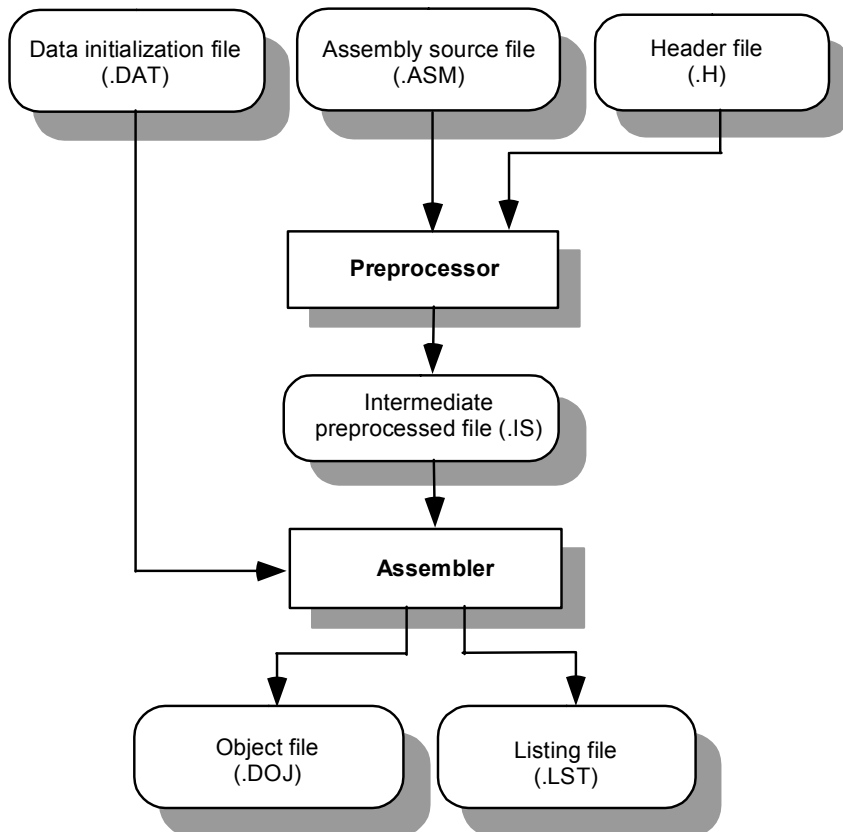


Figure 1-1. Assembler Input and Output Files

Assemble your source files from the VisualDSP++ environment or using any mechanism, such as a batch file or makefile, that will support invoking the assembler driver `eamts.exe` with a specified command-line command. By default, the assembler processes an input file to produce a binary object file (`.DOJ`) and an optional listing file (`.LST`).

Object files produced by the TigerSHARC DSP assembler may be used as input to the linker and archiver. You can archive the output of an assembly process into a library file (`.DLB`), which can then be linked with other

objects into an executable. Use the linker to combine separately assembled object files and objects from library files to produce an executable file. For more information on the linker and archiver, see the *VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs*.

A binary object file (`.OBJ`) and an optional listing (`.LST`) file are final results of the successful assembly.

The assembler listing files are text files read for information on the results of the assembly process. The listing file also provides information about the imported C data structures. It tells which imports were used within the program, followed by a more detailed section (see `.IMPORT` directive [on page 1-50](#)). It shows the name, total size and layout with offset for the members. The information appears at the end of the listing. You must specify the `-l listname.lst` option ([on page 1-86](#)) to get the information.

The assembly source file may contain preprocessor commands, such as `#include`, that cause the preprocessor to include header files (`.H`) into the source program. The preprocessor's only output, an intermediate source file (`.IS`), is the assembler's primary input. In normal operation, the preprocessor output is a temporary file that will be deleted during the assembly process.

Program Content

Assembly source file statements include assembly instructions, assembler directives, and preprocessor commands.

Assembly Instructions

Instructions adhere to the DSP's instruction set syntax documented in the DSP's Instruction Set manual. Each instruction line must be terminated by a pair of semicolons (`;;`). [Figure 1-2 on page 1-9](#) shows an example assembly source file.

To mark the location of an instruction, place an address label at the beginning of an instruction line or on the preceding line. End the label with a colon (:) before beginning the instruction. Your program can then refer to this memory location using the label instead of an absolute address. The assembler places no restriction on the number of characters in a label.

Labels are case sensitive. The assembler treats “outer” and “Outer” as unique labels. For example,

```
outer: J0 = J0-1;;  
Outer: J1 = J0;;  
JUMP outer;;    //jumps back 2 instructions
```

Assembler Directives

Directives begin with a period (.) and end with a semicolon (;). The assembler does not differentiate between directives in lowercase or uppercase. Note that directives do not end with double semicolon (; ;).



This manual prints directives in uppercase to distinguish them from other assembly statements.

For example,

```
.SECTION data1;  
.VAR sqrt_coeff[2] = 0x5D1D, 0xA9ED;
```

For a complete description of the `eamts` assembler’s directive set, see [“Assembler Directives” on page 1-39](#).

Preprocessor Commands

Preprocessor commands begin with a pound sign (#) and end with a carriage return. The pound sign must be the first non-white space character on the line containing the command. If the command is longer than one line, use a backslash (\) and a carriage return to continue the command onto the next line.

Do not put any characters between the backslash and the carriage return. Unlike assembler directives, preprocessor commands are case sensitive and must be lowercase. For example,

```
#include "string.h"

#define MAXIMUM 100
```

For more information, see [“Writing Preprocessor Commands” on page 2-3](#). For a list of the preprocessor commands, see [“Preprocessor Command Reference” on page 2-10](#).

Program Structure

An assembly source file defines code (instructions) and data, and organizes the instructions and data to allow use of the Linker Description File (LDF) to describe how code and data are mapped into the memory on your target DSP. The way you structure your code and data into memory should follow the memory architecture of the target DSP.

Use the `.SECTION` directive to organize the code and data in assembly source files. The `.SECTION` directive defines a grouping of instructions and data that will occupy contiguous memory addresses in the DSP. The name given in a section directive corresponds to an input section name in the Linker Description File.

Suggested input section names that you could use in your assembly source appear in [Table 1-1 on page 1-8](#). Using these predefined names in your sources makes it easier to take advantage of the default `.LDF` file included in your DSP system.

For more information on the LDF files, see the *VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs*.

You can use sections in a program to group elements to meet hardware constraints.

Table 1-1. Suggested Input Section Names

.SECTION Name	Description
data1	A section that holds data in Memory Block M1.
data2	A section that holds data in Memory Block M2.
program	A section that holds code.

To group the code that reside in off-chip memory, declare a section for that code and place that section in the selected memory with the linker. [Figure 1-2 on page 1-9](#) shows how a program divides into sections that match the memory segmentation of a DSP system.

The example assembly program defines three sections; each section begins with a `.SECTION` directive and ends with the occurrence of the next `.SECTION` directive or end-of-file. The source program contains two data and one program section:

- Data Sections—`data1` and `data2`. Variables and buffers are declared and can be initialized.
- Program Section—`program`. Data, instructions, and statements for conditional assembly are coded.

Looking at [Figure 1-2](#), notice that an assembly source may contain preprocessor commands, such as `#include` to include other files in your source code, `#ifdef` for conditional assembly, or `#define` to define macros.

Assembler directives, such as `.VAR`, appear within sections to declare and initialize variables.

Data Section	→	.SECTION data1;
Assembler Directive	→	.VAR buffer1[0x100] = "buffer.dat";
Data Section	→	.SECTION data2;
		.VAR buffer2;
Code Section	→	.SECTION program;
Assembler Label	→	start:
Preprocessor Commands for Conditional Assembly	→	#ifndef XRO_SET_T0_2
		XRO = 0x00000001;;
		#endif
		#ifdef XRO_SET_T0_2
		XRO = 0x00000002;;
		#endif
Assembly Instructions	→	J1 = buffer1;;
		JL1 = 0;;
		J2 = 1;;
		LC0 = 0x100;;
		this_loop: [J1+=J2]=XRO;;
		IF NLCOE, JUMP this_loop;;

Figure 1-2. Example Assembly Source File

Listing 1-1 shows a sample user-defined Linker Description File. Looking at the LDF's `SECTIONS{}` command, notice that the `INPUT_SECTION` commands map to the memory sections' names (such as `program`, `data1`, `data2`, `ctor`, `heaptab`, etc.) used in the example assembly sample program. The `SECTIONS{}` commands define the `.SECTION` placements in the system's physical memory as defined by the linker's `MEMORY{}` command.

Listing 1-1. Example Linker Description File

```

ARCHITECTURE(ADSP-TS101)
SEARCH_DIR( $ADI_DSP\TS\lib )
$OBJECTS = $COMMAND_LINE_OBJECTS;

// Internal memory blocks are 0x10000 (64k)

MEMORY
```

Assembler Guide

```
{
M0Code   { TYPE(RAM) START(0x00000000) END(0x0000FFFF) WIDTH(32) }
M1Data   { TYPE(RAM) START(0x00080000) END(0x0008BFFF) WIDTH(32) }
M1Heap   { TYPE(RAM) START(0x0008C000) END(0x0008C7FF) WIDTH(32) }
M1Stack  { TYPE(RAM) START(0x0008C800) END(0x0008FFFF) WIDTH(32) }
M2Data   { TYPE(RAM) START(0x00100000) END(0x0010BFFF) WIDTH(32) }
M2Stack  { TYPE(RAM) START(0x0010C000) END(0x0010FFFF) WIDTH(32) }
SDRAM    { TYPE(RAM) START(0x04000000) END(0x07FFFFFF) WIDTH(32) }
MS0      { TYPE(RAM) START(0x08000000) END(0x0BFFFFFF) WIDTH(32) }
MS1      { TYPE(RAM) START(0x0C000000) END(0x0FFFFFFF) WIDTH(32) }
}
```

```
PROCESSOR p0      /* The processor in the system */
```

```
{
    OUTPUT($COMMAND_LINE_OUTPUT_FILE)

    SECTIONS
    {
        /* List of sections for processor P0 */
        code
        {
            FILL(0xb3c00000)
            INPUT_SECTION_ALIGN(4)
            INPUT_SECTIONS( $OBJECTS(program) )
        } >M0Code

        data1
        {
            INPUT_SECTIONS( $OBJECTS(data1) )
        } >M1Data

        data2
        {
            INPUT_SECTIONS( $OBJECTS(data2) )
        } >M2Data

        // Provide support for initialization, including C++ static
        // initialization. This section builds a table of
        // initialization function pointers.
        ctor
        {
```

```

        INPUT_SECTIONS( $OBJECTS(ctor0) )
        INPUT_SECTIONS( $OBJECTS(ctor1) )
        INPUT_SECTIONS( $OBJECTS(ctor2) )
        INPUT_SECTIONS( $OBJECTS(ctor3) )
        INPUT_SECTIONS( $OBJECTS(ctor) )
    } >M1Data

// Table containing heap segment descriptors
heaptab
{
    INPUT_SECTIONS( $OBJECTS(heaptab) )
} >M1Data

// Allocate stacks for the application.
jstackseg
{
    ldf_jstack_limit = .;
    ldf_jstack_base = . + MEMORY_SIZEOF(M1Stack);
} >M1Stack

kstackseg
{
    ldf_kstack_limit = .;
    ldf_kstack_base = . + MEMORY_SIZEOF(M2Stack);
} >M2Stack

// The default heap occupies its own memory block.
defheapseg
{
    ldf_defheap_base = .;
    ldf_defheap_size = MEMORY_SIZEOF(M1Heap);
} >M1Heap
}
}

```

Program Interfacing Requirements

You can interface your assembly program with a C or C++ program. The C/C++ compiler supports two methods for mixing C/C++ and assembly language:

- Embedding assembly code in C or C++ programs
- Linking together C or C++ and assembly routines

To embed (inline) assembly code in your C or C++ program, use the `asm()` construct. To link together programs that contain C/C++ and assembly routines, use assembly interface macros. These macros facilitate the assembly of mixed routines. For more information about these methods, see the *VisualDSP++ 3.0 C/C++ Compiler and Library Manuals* for the target DSPs.

When writing a C or C++ program that interfaces with assembly, observe the same rules that the compiler follows as it produces code to run on the DSP. These rules for compiled code define the compiler's run-time environment. Complying with a run-time environment means following rules for memory usage, register usage, and variable names.

The definition of the run-time environment for the TigerSHARC DSP's C/C++ compiler is provided in the *VisualDSP++ 3.0 C/C++ Compiler and Library Manuals for TigerSHARC DSPs*, which also includes a series of examples to demonstrate how to mix C/C++ and assembly code.

Using Assembler Support for C Structs

The assembler supports C `typedef/struct` declarations within assembly source. These are the assembler data directives and built-ins that provide high-level programming features with C structs in the assembler:

- **Data Directives:**
 - `.IMPORT` (see [on page 1-50](#))
 - `.EXTERN STRUCT` (see [on page 1-46](#))
 - `.STRUCT` (see [on page 1-66](#))
- **C Struct in Assembly Built-ins:**
 - `OFFSETOF(struct/typedef,field)` (see [on page 1-35](#))
 - `SIZEOF(struct/typedef)` (see [on page 1-36](#))
- **Struct References:**
 - `struct->field` (nesting supported) (see [on page 1-37](#))

For more information on C struct support, refer to the “-flags-compiler” command-line switch [on page 1-84](#) and to “Reading a Listing File” [on page 1-18](#).

C structs in assembly features accept the full set of legal C symbol names, including those that are otherwise reserved in the TigerSHARC assembler. For example, `J1`, `J2` and `J3` use reserved keywords in the TigerSHARC assembler, but it is legal to reference them in the context of the C struct in assembly features. For example,

```
.IMPORT "Samples.h";
//  typedef struct Samples {
//      int J1;
//      int J2;
//      int J3;
//  }Samples;

.SECTION data1;

.STRUCT Samples Sample1={
```

```
J1 = 0x1000,  
J2 = 0x2000,  
J3 = 0x3000  
};  
  
.SECTION program;  
doubleMe:  
// The code may look confusing, but J2 can be used both  
// as a register and a struct member name  
J2 = Sample1;;  
J0 = J2+OFFSETOF(Sample1,J2);;  
J0 = J0+J0;;  
[J2+OFFSETOF(Sample1,J2)] = J0;;
```



For better code readability, avoid `.STRUCT` member names that have the same spelling as assembler keywords. This may not always be possible if your application needs to use an existing set of C header files.

Preprocessing a Program

The assembler includes a preprocessor that allows the use of C-style preprocessor commands in your assembly source files. The preprocessor automatically runs before the assembler unless you use the assembler's `-sp` (skip preprocessor) switch. [Table 2-3 on page 2-11](#) lists preprocessor commands and provides a brief description of each command.

You can see the command line the assembler uses to invoke the preprocessor by adding the “`-v[erbose]`” switch ([on page 1-90](#)) to the assembler command line or by selecting **Verbose output** on the **Assemble** tab (property page) of the **Project Options** dialog box, accessible from the **Project** menu.

Preprocessor commands are useful for modifying assembly code. For example, you can use the `#include` command to fill memory, load configuration registers, and set up processor parameters. You can use the

`#define` command to define constants and aliases for frequently used instruction sequences. The preprocessor replaces each occurrence of the macro reference with the corresponding value or series of instructions.

For example, the macro `MAXIMUM` in the example [on page 1-7](#) is replaced with the number `100` during preprocessing. For more information on the preprocessor command set, see “[Preprocessor Command Reference](#)” [on page 2-10](#). For more information on preprocessor usage, see “[-flags-pp -opt1 \[, -opt2...\]](#)” [on page 1-85](#).

Note that there is one important difference between the assembler preprocessor and compiler preprocessor. the assembler preprocessor treats the character “.” as part of an identifier. Thus, “.EXTERN” is a single identifier and will not match a preprocessor macro “extern”.

This behavior can affect how macro expansion is done for some processor instructions. For example,

```
#define EXTERN ox123
.EXTERN Coordinate;      // EXTERN not affected by macro

#define MY_REG JO
MY_REG.1 = 14;           // MY_REG.1 is not expanded;
                        // “.” is part of token
```

Using Assembler Feature Macros

The assembler includes the command to invoke preprocessor macros to define the context, such as the source language, the architecture, and the specific processor. These “feature macros” allow the programmer to use preprocessor conditional commands to configure the source for assembly based on the context.

The set of feature macros includes:

Assembler Guide

<code>-D__LANGUAGE_ASM =1</code>	Always present
<code>-D__ADSPTS__ =1</code>	Always present
<code>-D__ADSPTS101__ =1</code>	Present when running <code>easmts -proc ADSP-TS101</code> with ADSP-TS101 DSPs
<code>-D__ADSPTS201__ =1</code>	Present when running <code>easmts -proc ADSP-TS201</code> with ADSP-TS201 DSPs

For the `.IMPORT` headers, the assembler calls the compiler driver with the appropriate processor option and the compiler sets the machine constants accordingly (and defines `-D__LANGUAGE_C = 1`). This macro is present when used for C compiler calls to specify headers. It replaces `-D__LANGUAGE_ASM`.

For example,

```
easmts -proc -ADSP-TS101 assembly --> ccts -TS101
```

```
easmts -proc -ADSP-TS201 assembly --> ccts -TS201
```



Use the `-verbose` option to verify what macro is default-defined. Refer to Chapter 1 in the *VisualDSP++ 3.0 C/C++ Compiler and Library Manuals* for the target DSPs for more information.

Make Dependencies

The assembler can generate “make dependencies” for a file to allow VisualDSP++ and other makefile-based build environments to determine when to rebuild an object file due to changes in the input files. The assembler source file and any files mentioned in the `#include` commands, `.IMPORT` directives, or buffer initializations (in `.VAR` and `.STRUCT` directives) constitute the “make dependencies” for an object file.

When VisualDSP++ requests make dependencies for the assembly, the assembler produces the dependencies from buffer initializations and invokes

- The preprocessor to determine the make dependency from `#include` commands, and
- The compiler to determine the make dependencies from the `.IMPORT` headers.

The following example shows make dependencies for `VCSE_IBase.h` which includes `vcse.h`. Note that the same header `VCSE_IBase.h` when called from the assembler (with assembler `#defines`) also includes `VCSE_asm.h`, but this was not the case when called for compiling `.IMPORT`.

```
easmts -proc ADSP-TS201 -M -l main.lst main.asm

// dependency from the assembler
"main.doj": "main.asm"

// dependencies from the assembler preprocessor PP for
// the #include headers
"main.doj": "ACME_Impulse_factory.h"
"main.doj": "ACME_Impulse_types.h"
"main.doj": "VCSE_IBase.h"
"main.doj": "VCSE_asm.h"
"main.doj": "vcse.h"

// dependencies from the compiler for the .IMPORT headers
main.doj: .\ACME_IFir.h
main.doj: .\ADI_IAlg.h
main.doj: .\VCSE_IBase.h
main.doj: .\vcse.h
```

Reading a Listing File

A listing file (`.LST`) is an optional output text file that lists the results of the assembly process. Listing files provide the following information:

- **Address** — The first column contains the offset from the `.SECTION`'s base address.
- **Opcode** — The second column contains the hexadecimal opcode that the assembler generates for the line of assembly source.
- **Line** — The third column contains the line number in the assembly source file.
- **Assembly Source** — The fourth column contains the assembly source line from the file.

The assembler listing file provides information about the imported C data structures. It tells which imports were used within the program, followed by a more detailed section. It shows the name, total size and layout with offset for the members. The information appears at the end of the listing. You must specify the `-l listname.lst` option (as shown [on page 1-86](#)) to get a listing file.

Assembler Syntax Reference

When you develop a source program in assembly language, include pre-processor commands and assembler directives to control the program's processing and assembly. You must follow the assembler rules and conventions of syntax to define symbols (identifiers), expressions, and use different numeric and comment formats.

Software developers who write assembly programs should be familiar with:

- [“Assembler Keywords and Symbols” on page 1-19](#)
- [“Assembler Expressions” on page 1-27](#)
- [“Assembler Operators” on page 1-28](#)
- [“Numeric Formats” on page 1-30](#)
- [“Comment Conventions” on page 1-33](#)
- [“Conditional Assembly Directives” on page 1-33](#)
- [“C Struct Support in Assembly Built-ins” on page 1-35](#)
- [“-> Struct References” on page 1-37](#)
- [“Assembler Directives” on page 1-39](#)

Assembler Keywords and Symbols

The assembler supports predefined keywords that include register and bit-field names, assembly instructions, and assembler directives. [Table 1-2](#) lists the assembler keywords for TigerSHARC DSPs. Although the keywords in the listings appear in uppercase, the keywords are case insensitive in the assembler's syntax. For example, the assembler does not differentiate between “MAX” and “max”.

Assembler Syntax Reference

Table 1-2. TigerSHARC DSP Assembler Keywords

__ADI__	__DATE__	__FILE__	__LINE__	__STDC__
__TIME__				
.ALIGN	.ALIGN_CODE	.ELIF	.ELSE	.ENDIF
.EXTERN	.FILE	.GLOBAL	.IF	.IMPORT
.LEFTMARGIN	.LIST	.LIST_DATA	.LIST_DATFILE	.LIST_DEFTAB
.LIST_LOCTAB	.LIST_WRAPDATA	.NEWPAGE	.NOLIST_DATA	.NOLIST_DATFILE
.NOLIST_WRAPDATA	.NEWPAGE	.NOLIST_DATA	.NOLIST_DATFILE	.NOLIST_WRAPDATA
.PAGELENGTH	.PAGEWIDTH	.PREVIOUS	.SECTION	.STRUCT
.VAR	.WEAK			
ABS	ACS	ADDRESS	AND	ASHIFT
BCLR	BFOINC	BFOTMP	BITEST	BITFIFO
BKFPT	BR	BSET	BTBDIS	BTBELOCK
BTBEN	BTBLOCK	BTBINV	BTGL	BY
C	CALL	CB	CJMP	CJMP_CALL
CI	CLIP	COMP	COMPACT	COPYSIGN
DAB	DEC	DESPREAD	DO	
ELSE	EMUTRAP	EXP	EXPAND	EXTD
FCOMP	FDEP	FEXT	FIX	FLOAT
FTEST0	FTEST1			
GETBITS				
IDLE	INC			
JC	JUMP			
KC				
LD0	LD1	LENGTH	LIBSIM_CALL	LOGB

Table 1-2. TigerSHARC DSP Assembler Keywords (Cont'd)

LP	LSHIFT	LSHIFTR		
MANT	MASK	MAX	MERGE	MIN
NEWPAGE	NOT	NOP	NP	
OFFSETOF	ONES	OR		
PASS	PERMUTE	PRECISION	PUTBITS	
RDS	RECIPS	RESET	RETI	ROT
ROTL	ROTR	ROUND	RSQRTS	RTI
SCALB	SDAB	SE	SECTION	SF0
SF1	SNGL	SIZE	SIZEOF	STRUCT
SUM				
TMAX	TRAP	TYPEVAR		
VMIN	VMAX			
XCORRS	XOR	XSDAB		
YDAB	YSDAB			
// JK Register Group				
J0 through J31				
K0 through K31				
JB0	JB1	JB2	JB3	
KB0	KB1	KB2	KB3	
JL0	JL1	JL2	JL3	
KL0	KL1	KL2	KL3	
// RF Register Group				
FR0 through FR31				

Assembler Syntax Reference

Table 1-2. TigerSHARC DSP Assembler Keywords (Cont'd)

MR3:0	MR3:2	MR1:0		
MR0	MR1	MR2	MR3	MR4
PR0	PR1	PR1:0		
R0 through R31				
XSTAT	YSTAT	XYSTAT		
XR0 through XR31				
YR0 through YR31				
// Accelerator Register Group				
TR0 through TR31				
THR0	THR1	THR2	THR3	
// EP Register Group				
BMAX	BMAXC	BUSLK	FLGPIN	FLGPINCL
FLGPINST	SDRCON	SYSCON	SYSCONCL	SYSCONST
SYSCTL	SYSTAT	SYSTATCL		
// Misc. Register Group				
AUTODMA0	AUTODMA1			
BTBCMD	BTBDATA			
BTB0TG0 through BTB0TG31				
BTB1TG0 through BTB1TG31				
BTB2TG0 through BTB2TG31				
BTB3TG0 through BTB3TG31				
BTB0TR0 through BTB0TR31				

Table 1-2. TigerSHARC DSP Assembler Keywords (Cont'd)

BTB1TR0 through BTB1TR31				
BTB2TR0 through BTB2TR31				
BTB3TR0 through BTB3TR31				
BTBLRU0 through BTBLRU31				
CACMD0	CACMD2	CACMD4	CACMD8	CACMD10
CACMDALL				
CADATA0	CADATA2	CADATA4	CADATA8	CADATA10
CADATAALL				
CASTAT0	CASTAT2	CASTAT4	CASTAT8	CASTAT10
CASTATALL				
CCAIRO	CCAIR2	CCAIR4	CCAIR8	CCAIR10
CCAIRALL				
CCNT0	CCNT1	CJMP	CMCTL	
DBGE	DC4 through DC13			
DCD0	DCD1	DCD2	DCD3	DCNT
DCNTCL	DCNTST			
DCS0	DCS1	DCS2	DCS3	
DSTAT	DSTATC			
EMUCTL	EMUDAT	EMUIR	EMUSTAT	
IDCODE	ILATCLH	ILATCLL	ILATH	ILATL
ILATSTH	ILATSTL	IMASKH	IMASKL	INSTAT
INTEN	INTCTL	IVBUSLK	IVDBG	IVHW
IVDMA0 through IVDMA13				
IVIRQ0	IVIRQ1	IVIRQ2	IVIRQ3	IVLINK0
IVLINK1	IVLINK2	IVLINK3	IVSW	IVTIMER0HP

Assembler Syntax Reference

Table 1-2. TigerSHARC DSP Assembler Keywords (Cont'd)

IVTIMER0LP	IVTIMER1HP	IVTIMER1LP		
LBUFRX0	LBUFRX1	LBUFRX2	LBUFRX3	
LBUFTX0	LBUFTX1	LBUFTX2	LBUFTX3	
LC0	LC1	KB2	KB3	
LCTL0	LCTL1	LCTL2	LCTL3	
LRCTL0	LRCTL1	LRCTL2	LRCTL3	
LRSTAT0	LRSTAT1	LRSTAT2	LRSTAT3	
LRSTATC0	LRSTATC1	LRSTATC2	LRSTATC3	
LSTAT0	LSTAT1	LSTAT2	LSTAT3	
LSTATC0	LSTATC1	LSTATC2	LSTATC3	
LTCTL0	LTCTL1	LTCTL2	LTCTL3	
LTSTAT0	LTSTAT1	LTSTAT2	LTSTAT3	
LTSTATC0	LTSTATC1	LTSTATC2	LTSTATC3	
MISR0	MISR1	MISR2	MISRCTL	
RETI	RETIB	RETS	RTI	
OSPID				
PMASKH	PMASKL	PRFM	PRFCNT	
SERIAL_H	SERIAL_L	SFREG	SQCTL	SQCTLST
SQCTLCL	SQSTAT			
TESTMODES	TIMER0L	TIMER1L	TIMER0H	TIMER1H
TMRIN0L	TMRIN0H	TMRIN1L	TMRIN1H	TRCB
TRCBMASK	TRCBPTR	TRCBVAL		
VIRPT				
WPOCTL	WP1CTL	WP2CTL	WPOSTAT	WP1STAT
WP2STAT	WOH	WOL	W1H	W1L

Table 1-2. TigerSHARC DSP Assembler Keywords (Cont'd)

W2H	W2L			
// Conditions which may be prefixed with X, Y, XY, NX, NY, XY				
AEQ	ALE	ALT	MEQ	MLE
MLT	SEQ	SF1	SF0	SLT
// Conditions which may be prefixed with J, K, NJ, NK				
EQ	LE	LT	CBQ	CB1
// Conditions which may be prefixed with N				
ISF0	ISF1	LC0E	LC1E	BM
FLAG0_IN	FLAG1_IN	FLAG2_IN	FLAG3_IN	

Extend these sets of keywords with symbols that declare sections, variables, constants, and address labels. When defining symbols in assembly source code, follow these conventions:

- Define symbols that are unique within the file in which they are declared.

If you use a symbol in more than one file, use the `.GLOBAL` assembly directive to export the symbol from the file in which it is defined. Then use the `.EXTERN` assembly directive to import the symbol into other files.

- Begin symbols with alphabetic characters.

Symbols can use alphabetic characters (A–Z and a–z), digits (0–9), and special characters `$` and `_` (dollar sign and underscore) as well as `.` (dot).

Symbols are case sensitive; so `input_addr` and `INPUT_ADDR` define unique variables.

The dot, point, or period, '.' as the first character of a symbol triggers special behavior in the VisualDSP++ environment. Such symbols will not appear in the symbol table accessible in the debugger. A symbol name in which the first two characters are points will not appear even in the symbol table of the object.

The compiler and runtimes prepend '_' to avoid using symbols in the user name space that begin with an alphabetic character.

- Do not use a reserved keyword to define a symbol.
- Match source and LDF sections' symbols.

Ensure that .SECTION name symbols do not conflict with the linker's keywords in the LDF. The linker uses SECTION name symbols to place code and data in DSP memory. For more details, see the *VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs*.

Ensure that .SECTION name symbols do not begin with the '.' (dot).

- Terminate the definition of address label symbols with a colon (:).
- The reserved word list for TigerSHARC DSPs includes some keywords with commonly used spellings; therefore, ensure correct syntax spelling.

Address label symbols may appear at the beginning of an instruction line or stand alone on the preceding line.

The following disassociated lines of code demonstrate symbol usage.

```
.VAR xoperand;           // xoperand is a variable
.VAR input_array[10];    // input_array is a 10 element
                        // data buffer
sub_routine_1:           // sub_routine_1 is a label
.SECTION kernel;         // kernel is a section
```

Assembler Expressions

The assembler can evaluate simple expressions in source code. The assembler supports two types of expressions: constant and symbolic.

Constant expressions

A constant expression is acceptable where a numeric value is expected in an assembly instruction or in a preprocessor command. Constant expressions contain an arithmetic or logical operation on two or more numeric constants. For example,

```
2.9e-5 + 1.29
(128 - 48) / 3
0x55&0x0f
7.6r - 0.8r
```

For information about fraction type support, refer to [“Fractional Type Support” on page 1-30](#).

Symbolic expressions

Symbolic expressions contain symbols, whose values may not be known until link time:

```
data/8
(data_buffer1 + data_buffer2) & 0xF
strdup + 2
data_buffer1 + LENGTH(data_buffer2)*2
```

Symbols in this type of expression are data variables, data buffers, and program labels. In the first three examples above, the symbol name represents the address of the symbol. The fourth combines that meaning of a symbol with a use of the length operator (see [Table 1-4 on page 1-29](#)).

Assembler Operators

[Table 1-3](#) lists the assembler’s numeric and bitwise operators used in constant expressions and address expressions. These operators are listed in groups ordered from highest to lowest precedence. Operators with highest precedence are evaluated first. When two operators have the same precedence, the assembler evaluates the leftmost operator first. Relational operators are only supported in relational expressions in conditional assembly, as described in [“Conditional Assembly Directives” on page 1-33](#).

Table 1-3. Operator Precedence

Operator	Usage Description	Designation
(expression)	expression in parentheses evaluates first	
~ -	Ones complement Unary minus	Tilde Minus
* / %	Multiply Divide Modulus	Asterisk Slash Percentage
+ -	Addition Subtraction	Plus Minus
<< >>	Shift left Shift right	
&	Bitwise AND (preprocessor only)	
	Bitwise inclusive OR	
^	Bitwise exclusive OR (preprocessor only)	
&&	Logical AND	
	Logical OR	

The assembler also supports special “address” and “length of” operators. [Table 1-4](#) lists and describes these operators used in constant and address expressions.

Table 1-4. Special Assembler Operators

Operator	Usage Description
ADDRESS(<i>symbol</i>)	Address of <i>symbol</i>
<i>symbol</i>	Address pointer to <i>symbol</i>
LENGTH(<i>symbol</i>)	Length of <i>symbol</i> in words

The “address of” and “length of” operator can be used with external symbols—apply it to symbols that are defined in other sections as `.GLOBAL` symbols.

The following example demonstrates how the assembler operators are used to load the length and address information into registers (when setting up circular buffers in TigerSHARC processors).

```
.SECTION data1;           // Data segment
.VAR real_data[n];       // n = number of input samples
...
.SECTION program;        // Code segment
                           // Load the base address of the
                           // circular buffer:
JB3 = real_data;;
                           // Load the index:
J3=real_data;;
                           // Load the circular buffer length:
JL3 = LENGTH(real_data);;
                           // Set loop counter 0 with buffer length:
LC0 = JL3;;
start:
XR0 = CB [J3 += 1];;     // Read data from circular buffer
if NLC0E, jump start;;
```

This code fragment initializes JB3 and JL3 to the base address and length, respectively, of the circular buffer `real_data`. The buffer length value contained in JL3 determines when addressing wraps around the top of the buffer. For further information on circular buffers, refer to your DSP Hardware Reference Manual.

Numeric Formats

The assembler supports binary, decimal, hexadecimal, floating-point, and fractional numeric formats (bases) within expressions and assembly instructions. [Table 1-5](#) describes the conventions of notation the assembler uses to distinguish between numeric formats.

Table 1-5. Numeric Formats

Convention	Description
<i>0xnumber</i>	“0x” prefix indicates a hexadecimal number
<i>B#number</i> <i>b#number</i>	“B#” or “b#” prefix indicates a binary number
<i>number.number[e {+/-} number]</i>	Entry for floating-point number
<i>number</i>	No prefix and no decimal point indicates a decimal number
<i>numberr</i>	“r” suffix indicates a fractional number



Note that due to the support for *b#* and *B#* binary notation, the preprocessor stringization functionality has been turned off by default to avoid possible undesired stringization. For more information, refer to “[# \(Argument\)](#)” on [page 2-27](#) and the preprocessor’s “[-stringize](#)” command-line switch (on [page 2-37](#)), and to the assembler’s “[-flags-pp -opt1 \[-opt2...\]](#)” command-line switch (on [page 1-85](#)).

Fractional Type Support

Fractional (fract) constants are specially marked floating-point constants to be represented in fixed-point. A fract constant uses the floating-point representation with a trailing “r”, where *r* stands for *fract*.

The legal range is $[-1...1)$ which means the values must be greater than or equal -1 and less than 1. Fracts are represented as signed values.

For example,

```
.VAR myFracts[] = {0.5r, -0.5e-4r, -0.25e-3r, 0.875r};
/* Constants are examples of legal fracts */

.VAR OutOfRangeFract = 1.5r;
/* [Error ...Fract constant '1.5r' is out of range.
Fract constants must be greater than or equal to -1 and
less than 1. */
```



Fract 1.15 is a default. Use a /R32 qualifier (in .VAR/R32) to support 32-bit initialization for use with 1.31 fracts.

1.31 Fracts

Fracts supported by the TigerSHARC processors use 1.31 format, meaning a sign bit and “31 bits of fraction”. This is -1 to $+1-2^{**31}$. For example, 1.31 maps the constant 0.5r to 2^{**31} .

The conversion formula used by a TigerSHARC processor to convert from the floating-point to fixed-point uses a scale factor of 31.

For example,

```
.VAR/R32 myFract = 0.5r;
// Fract output for 0.5r is 0x4000 0000
// sign bit + 31 bits
// 0100 0000 0000 0000 0000 0000 0000 0000
// 4 0 0 0 0 0 0 0 = 0x4000 0000 = .5r

.VAR/R32 myFract = -1.0r;
// Fract output for -1.0r is 0x8000 0000
// sign bit + 31 bits
// 1000 0000 0000 0000 0000 0000 0000 0000
// 8 0 0 0 0 0 0 0 = 0x8000 0000 = -1.0r

.VAR/R32 myFract = -1.72471041E-03;
// Fract output for -1.72471041E-03 is 0xFFC77C15
// sign bit + 31 bits
// 1111 1111 1100 0111 0111 1100 0001 0101
// F F C 7 7 C 1 5
```

Assembler Syntax Reference

1.0r Special Case

1.0r is out-of-the-range fract. Specify 0x7FFF FFFF for the closest approximation of 1.0r within the 1.31 representation.

Fractional Arithmetic

The assembler provides support for arithmetic expressions using operations on fractional constants, consistent with the support for other numeric types in constant expressions, as described in [“Assembler Expressions” on page 1-27](#).

The internal (intermediate) representation for expression evaluation is a double floating-point value. Fract range checking is deferred until the expression is evaluated. For example,

```
#define fromSomewhereElse 0.875r
.SECTION data1;
.VAR localOne = fromSomewhereElse + 0.005r;
                                // Result .88r is within the legal range
.VAR xyz = 1.5r -0.9r;
                                // Result .6r is within the legal range
.VAR abc = 1.5r;               // Error: 1.5r out of range
```

Mixed Type Arithmetic

The assembler does not support arithmetic between fract and integers. For example,

```
.SECTION program;
.VAR myFract = 1 - 0.5r;
[Error ea1998] "fract.asm":2 Assembler Error: Illegal
mixing of types in expression.
```

Comment Conventions

The assembler supports C and C++ style formats for inserting comments in assembly sources. The `eamts` assembler does not support nested comments. [Table 1-6](#) lists and describes assembler comment conventions.

Table 1-6. Comment Conventions

Convention	Description
<code>/* comment */</code>	A “ <code>/* */</code> ” string encloses a multiple-line comment.
<code>// comment</code>	A pair of slashes “ <code>//</code> ” begin a single-line comment.

Conditional Assembly Directives

Conditional assembly directives are used for evaluation of assembly-time constants using relational expressions. The expressions may include relational and logical operations. In addition to integer arithmetic, the operands may be the C struct in assembly built-ins `sizeof()` and `offsetof()` that return integers.

The conditional assembly directives are:

- `.IF constant-relational-expression;`
- `.ELIF constant-relational-expression;`
- `.ELSE;`
- `.ENDIF;`

All conditional assembly blocks begin with an `.IF` directive and end with a `.ENDIF` directive. [Table 1-7 on page 1-35](#) shows examples of conditional directives.

Optionally, any number of `.ELIF` and a final `.ELSE` directive may appear within the `.IF` and `.ENDIF`. The conditional directives are each terminated with a semi-colon “`;`” just like all existing assembler directives. Condi-

tional directives do not have to appear alone on a line. These directives are in addition to the C-style preprocessing directives `#if`, `#elif`, `#else`, and `#endif`.



The `".IF`", `".ELSE`", `".ELIF`" and `".ENDIF`" directives (in any case) are reserved keywords.

The `.IF` conditional assembly directives must be used to query about C structs in assembly using the `sizeof()` and/or `offsetof()` built-ins. These built-ins are evaluated at assembly time, so they cannot appear in expressions in the `#if` preprocessor directives.

In addition, the `sizeof()` and `offsetof()` built-ins (see [“C Struct Support in Assembly Built-ins” on page 1-35](#)) can be used in relational expressions. Different code sequences can be included based on the result of the expression. For example, a `sizeof(struct/typedef/C base type)` is permitted.

The assembler supports nested conditional directives. The outer conditional result propagates to the inner condition, just as it does in C preprocessing.

Assembler directives are distinct from preprocessor directives:

- The `#` directives are evaluated during preprocessing by the `PP` preprocessor. Therefore, preprocessor `#IF` directives cannot use the assembler built-ins (see [“C Struct Support in Assembly Built-ins”](#)).
- The conditional assembly directives are processed by the assembler in a later pass. Therefore, you would be able to write a relational or logical expression whose value will depend on the value of a `#define`. For example,

```
.IF tryit == 2;
<some code>
.ELIF tryit >= 3;
<some more code>
.ENDIF;
```

If you have `"#define tryit 2"`, then the code `<some code>` will be assembled, `<some more code>` will not be.

- There are no parallel assembler directives for C-style directives `#define`, `#include`, `#ifdef`, `#if defined(name)`, `#ifndef`, etc. .

Table 1-7. Relational Operators for Conditional Assembly

Relational Operators	Conditional Directive Examples
not !	<code>.if !0;</code>
greater than >	<code>.if (sizeof(myStruct) > 16);</code>
greater than equal >=	<code>.if (sizeof(myStruct) >= 16);</code>
less than <	<code>.if (sizeof(myStruct) < 16);</code>
less than equal <=	<code>.if (sizeof(myStruct) <= 16);</code>
equality ==	<code>.if (8 == sizeof(myStruct));</code>
not equal !=	<code>.if (8 != sizeof(myStruct));</code>
logical or	<code>.if (2 != 4) (5 == 5);</code>
logical and &&	<code>.if (sizeof(char) == 2 && sizeof(int) == 4);</code>

C Struct Support in Assembler Built-ins

The assembler supports built-in functions that enable you to pass information obtained from the imported C struct layouts. The assembler currently supports two built-in functions: `OFFSETOF()` and `SIZEOF()`.

OFFSETOF() Built-In

The `OFFSETOF()` built-in is used to calculate the offset of a specified member from the beginning of its parent data structure. For TigerSHARC DSPs, `OFFSETOF()` units are in words.

```
OFFSETOF( struct/typedef, memberName)
```

where:

struct/typedef—**struct VAR** or a **typedef** can be supplied as the first argument

memberName—a member name within the **struct** or **typedef** (second argument)

sizeof() Built-In

The `sizeof()` built-in returns the amount of storage associated with an imported C struct or data member. It provides functionality similar to its C counterpart.

```
sizeof(struct/typedef/C base type);
```

where:

`sizeof()` built-in takes a symbolic reference as its single argument. A symbolic reference is a name followed by zero or more qualifiers to members.

The `sizeof()` built-in gives the amount of storage associated with:

- An aggregate type (structure)
- A C base type (`int`, `char`, etc.)
- A member of a structure (any type)

For example,

```
.IMPORT "Celebrity.h";
.EXTERN STRUCT Celebrity StNick;
R3 = sizeof(Celebrity);    // typedef
R3 = sizeof(StNick);       // struct var of typedef Celebrity
R3 = sizeof(char);         // C built-in type
R3 = sizeof(StNick->Town);  // member of a struct var
R3 = sizeof(Celebrity->Town); // member of a struct typedef
```

 The `sizeof()` built-in returns the size in the units appropriate for its processor. For TigerSHARC DSPs, units are in words.

When applied to a structure type or variable, `sizeof()` returns the actual size, which may include padding bytes inserted for alignment. When applied to a statically dimensioned array, `sizeof()` returns the size of the entire array.

-> Struct References

A reference to a `struct VAR` provides an absolute address. For a fully qualified reference to a member, the address is offset to the correct location within the struct. The assembler syntax for struct references is “->”. For example,

```
myStruct->Member5
```

references the address of `Member5` located within `myStruct`. If the struct layout changes, there is no need to change the reference. The assembler re-calculates the offset when the source is re-assembled with the updated header.

Nested struct references are supported. For example,

```
myStruct->nestedRef->AnotherMember
```

 Unlike struct members in C, struct members in the assembler are always referenced with “->” (and not “.”) because “.” is a legal character in identifiers in assembly and not available as a struct reference.

References within nested structures are permitted. A nested struct definition can be provided in a single reference in assembly code while a nested struct via a pointer type requires more than one instruction. Make use of the `offsetof()` built-in to avoid hard-coded offsets that could become invalid if the struct layout changes in the future.

Assembler Syntax Reference

Following are two nested struct examples for `.IMPORT`
`"CHeaderFile.h";`.

Example 1: Nested Reference Within the Struct Definition with Appropriate C Declarations

C Code

```
struct Location {
    char Town[16];
    char State[16];
};

struct myStructTag {
    int field1;
    struct Location NestedOne;
};
```

Assembly Code

```
.EXTERN STRUCT myStructTag _myStruct;
J0 = _myStruct->NestedOne->State;
```

Example 2: Nested Reference When Nested via a Pointer with Appropriate C Declarations

When nested via a pointer `myStructTagWithPtr`, which has `pNestedOne`, use pointer register offset instructions.

C Code

```
// from C header
struct Location {
    char Town[16];
    char State[16];
};

struct myStructTagWithPtr {
    int field1;
    struct Location *pNestedOne;
};
```

Assembly Code

```
// in assembly file
.EXTERN STRUCT myStructTagWithPtr _myStructWithPtr;
J0 = _myStructWithPtr->pNestedOne;
J0 = J0+OFFSETOF(Location,State);
```

Assembler Directives

Directives in an assembly source file control the assembly process. Unlike assembly instructions, directives do not produce opcodes during assembly. Use the following general syntax for assembler directives

```
.directive [/qualifiers |arguments];
```

Each assembler directive starts with a period (.) and ends with a semicolon (;). Some directives take qualifiers and arguments. A directive's qualifier immediately follows the directive and is separated by a slash (/); arguments follow qualifiers. Assembler directives can be uppercase or lowercase; uppercase distinguishes directives from other symbols in your source code.

The TigerSHARC DSP assembler supports the directives shown in [Table 1-8](#). A description of each directive appears in the following sections.

Table 1-8. Assembler Directive Summary

Directive	Description
.ALIGN (see on page 1-42)	Specifies an alignment requirement for data or code
.ALIGN_CODE (see on page 1-44)	Specifies an alignment requirement for code
.EXTERN (see on page 1-45)	Allows reference to a global symbol

Assembler Syntax Reference

Table 1-8. Assembler Directive Summary (Cont'd)

Directive	Description
.EXTERN STRUCT (see on page 1-46)	Allows reference to a global symbol (struct) that was defined in another file
.FILE (see on page 1-48)	Overrides <i>filename</i> given on the command line. Used by C compiler
.GLOBAL (see on page 1-49)	Changes a symbol's scope from local to global
.IMPORT (see on page 1-50)	Provides the assembler with the structure layout (C struct) information
.LEFTMARGIN (see on page 1-52)	Defines the width of the left margin of a listing
.LIST (see on page 1-53)	Starts listing of source lines
.LIST_DATA (see on page 1-54)	Starts listing of data opcodes
.LIST_DATFILE (see on page 1-55)	Starts listing of data initialization files
.LIST_DEFTAB (see on page 1-56)	Sets the default tab width for listings
.LIST_LOCTAB (see on page 1-57)	Sets the local tab width for listings
.LIST_WRAPDATA (see on page 1-58)	Starts wrapping opcodes that don't fit listing column
.NEWPAGE (see on page 1-59)	Inserts a page break in a listing
.NOLIST (see on page 1-53)	Stops listing of source lines
.NOLIST_DATA (see on page 1-54)	Stops listing of data opcodes
.NOLIST_DATFILE (see on page 1-55)	Stops listing of data initialization files

Table 1-8. Assembler Directive Summary (Cont'd)

Directive	Description
<code>.NOLIST_WRAPDATA</code> (see on page 1-58)	Stops wrapping opcodes that don't fit listing column
<code>.PAGELNGTH</code> (see on page 1-60)	Defines the length of a listing page
<code>.PAGEWIDTH</code> (see on page 1-61)	Defines the width of a listing page
<code>.PREVIOUS</code> (see on page 1-62)	Reverts to a previously described <code>.SECTION</code>
<code>.SECTION</code> (see on page 1-64)	Marks the beginning of a section
<code>.STRUCT</code> (see on page 1-66)	Defines and initializes data objects based on C typedefs from <code>.IMPORT C</code> header files
<code>.TYPE</code> (see on page 1-70)	Changes the default data type of a symbol. Used by C compiler
<code>.VAR</code> (see on page 1-71)	Defines and initializes 32-bit data objects
<code>.WEAK</code> (see on page 1-75)	Creates a weak definition or reference

.ALIGN, Specify an Address Alignment

The `.ALIGN` directive forces the address alignment of an instruction or data item. Use it to ensure section alignments in the `.LDF` file. You may use `.ALIGN` to ensure the alignment of the first element of a section, therefore providing the alignment of the object section (“INPUT SECTION” to the linker). You may also use the `INPUT_SECTION_ALIGN(#number)` linker command in the `.LDF` file to force all the following input sections to the specified alignment.

Refer to Chapter 1 “*Linker*” in the *VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs* for more information on section alignment.

Syntax:

```
.ALIGN expression;
```

where

expression — evaluates to an integer. It specifies an alignment requirement; its value must be a power of 2. When aligning a data item or instruction, the assembler adjusts the address of the current location counter to the next address that can be divided by the value of *expression*, with no remainder. The expression set to 0 or 1 signifies no address alignment requirement.



In the absence of the `.ALIGN` directive, the default address alignment is 1.

Example

```
.ALIGN 0;    /* no alignment requirement */
...
.ALIGN 1;    /* no alignment requirement */
...
.SECTION data1;
.ALIGN 2;
```

```
.VAR single;  
    /* aligns the data item on a double-word boundary,  
    at the location with the address value that can be  
    evenly divided by 2 */  
.ALIGN 4;  
.VAR samples1[100]="data1.dat";  
    /* aligns the first data item on a quad-word  
    boundary at the location with the address value that  
    can be evenly divided by 4; advances other data items  
    consequently */
```

.ALIGN_CODE, Specify an Address Alignment

The `.ALIGN_CODE` directive forces the address alignment of an instruction within the `.SECTION` it is used. It is similar to the `.ALIGN` directive, but whereas `.ALIGN` causes the code to be padded with 0's, `.ALIGN_CODE` pads with NOPs. The `.ALIGN_CODE` directive is used when aligning instructions.

Refer to Chapter 1 “*Linker*” in the *VisualDSP++ Linker and Utilities Manual for TigerSHARC DSPs* for more information on section alignment.

Syntax:

```
.ALIGN_CODE expression;
```

where

expression — evaluates to an integer. It specifies an alignment requirement; its value must be a power of 2. In TigerSHARC DSPs, the *expression* value is usually 4. When aligning a data item or instruction, the assembler adjusts the address of the current location counter to the next address that is divisible by the value of the *expression*. The expression set to 0 or 1 signifies no address alignment requirement.



In the absence of the `.ALIGN_CODE` directive, the default address alignment is 1.

Example

```
.ALIGN_CODE 0;    /* no alignment requirement */
...
.ALIGN_CODE 1;    /* no alignment requirement */
...
.SECTION program;
.ALIGN_CODE 4;
JUMP LABEL;;
    /* Jump instruction aligned to four word boundary.
       If necessary, padding will be done with NOPs */
```

.EXTERN, Refer to a Globally Available Symbol

The `.EXTERN` directive allows a code module to reference global data structures, symbols, etc. that are declared as `.GLOBAL` in other files. For additional information, see the `.GLOBAL` directive [on page 1-49](#).

Syntax:

```
.EXTERN symbolName1[, symbolName2, ...];
```

where

symbolName — the name of a global symbol to import. A single `.EXTERN` directive can reference any number of symbols on one line, separated by commas.

Example:

```
.EXTERN coeffs;
// This code declares an external symbol to reference
// the global symbol coeffs declared in the example code
// in the .GLOBAL directive description.
```

.EXTERN STRUCT, Refer to a Struct Defined Elsewhere

The `.EXTERN STRUCT` directive allows a code module to reference a struct that was defined in another file. Code in the assembly file can then reference the data members by name, just as if they were declared locally.

Syntax:

```
.EXTERN STRUCT typedef structvarName ;
```

where

typedef — the type definition for a struct VAR

structvarName — a struct VAR name

The `.EXTERN STRUCT` directive specifies a struct symbol name that was declared in another file. The naming conventions are the same for structs as for variables and arrays:

- If a struct was declared in a C file, refer to it with a leading `_`.
- If a struct was declared in an `.asm` file, use the name “as is”, no leading `_` is necessary.

The `.EXTERN STRUCT` directive optionally accepts a list, such as

```
.EXTERN STRUCT typedef structvarName [,STRUCT typedef structvarName ...]
```

The key to the assembler knowing the layout is the `.IMPORT` directive and the `.EXTERN STRUCT` directive associating the *typedef* with the struct VAR. To reference a data structure that was declared in another file, use the `.IMPORT` directive with the `.EXTERN` directive. This mechanism can be used for structures defined in assembly source files as well as in C files.

The `.EXTERN` directive supports variables in the assembler. If the program does reference struct members, `.EXTERN STRUCT` must be used because the assembler must consult the struct layout to calculate the offset of the struct members. If the program does not reference struct members, you can use `.EXTERN` for struct VARs.

Example:

```
.IMPORT "MyCelebrities.h";
    // 'Celebrity' is the typedef for struct var 'StNick'
    // .EXTERN means that '_StNick' is referenced within this
    // file, but not locally defined. This example assumes StNick
    // was declared in a C file and it must be referenced with
    // a leading underscore.
.EXTERN STRUCT Celebrity _StNick;
    // 'isSeniorCitizen' is one of the members of the 'Celebrity'
    // type
.SECTION program;
J0 = _StNick->isSeniorCitizen;;
```

.FILE, Override the Name of a Source File

The `.FILE` directive overrides the name of the source file. This directive may appear in the C/C++ compiler-generated assembly source file (`.S`). The `.FILE` directive is used to ensure that the debugger has the correct file name for the source file that had generated the object file.

Syntax:

```
.FILE "filename.ext";
```

where

filename — the name of the source file to associate with the object file. The argument is enclosed in double quotes.

Example:

```
.FILE "vect.c";    // the argument may be a *.c file
.SECTION data1;
...
...
```

.GLOBAL, Make a Symbol Globally Available

The `.GLOBAL` directive changes the scope of a symbol from local to global, making the symbol available for reference in object files that are linked to the current one. The `.GLOBAL` directive is used to make an identifier global to all files.

By default, a symbol has local binding, meaning the linker can resolve references to it only from the local file, that is, the same file in which it is defined. It is visible only in the file in which it is declared. Local symbols in different files can have the same name, and the linker considers them to be independent entities. Global symbols are visible from other files; all references from other files to an external symbol by the same name will resolve to the same address and value, corresponding to the single global definition of the symbol.

You change the default scope with the `.GLOBAL` directive. Once the symbol is declared global, other files may refer to it with `.EXTERN`. For more information, refer to the `.EXTERN` directive [on page 1-45](#). Note that `.GLOBAL` (or `.WEAK`) scope is required for symbols that appear in the `RESOLVE` commands in the `.LDF` file.

Syntax:

```
.GLOBAL symbolName1[, symbolName2,...];
```

where

symbolName — the name of a global symbol. A single `.GLOBAL` directive may define the global scope of any number of symbols separated by commas.

Example:

```
.VAR coeffs[10];           // declares a buffer
.VAR taps=100;             // declares a variable
.GLOBAL coeffs, taps;      // makes the buffer and the variable
                           // visible to other files
```

.IMPORT, Provide Structure Layout Information

The `.IMPORT` directive makes `struct` layouts visible inside an assembler program. The `.IMPORT` directive provides the assembler with the following structure layout information:

- The names of `typedefs` and `structs` available
- The name of each data member
- The sequence and offset of the data members

Syntax:

```
.IMPORT "headerfilename1" [ "headerfilename2" ...];
```

where

headerfilename — one or more comma-separated C header files enclosed in double quotes.

The `.IMPORT` directive does not allocate space for a variable of this type—that requires the `.STRUCT` directive.

The assembler takes advantage of knowing the `struct` layouts. The assembly programmer may reference `struct` data members by name in assembler source, as one would do in C. The assembler calculates the offsets within the structure based on the size and sequence of the data members.

If the structure layout changes, the assembly code need not change. It just needs to get the new layout from the header file, via the compiler. The make dependencies track the `.IMPORT` header files and know when a re-build is needed. Use the `-flags-compiler` assembler switch option (on page 1-84) to pass options to the C compiler for the `.IMPORT` header file compilations.

The `.IMPORT` directive with one or more `.EXTERN` directives allows code in the module to refer to a struct variable that was declared and initialized elsewhere. The C struct can either be declared in C compiled code or another assembly file.

The `.IMPORT` directive with one or more `.STRUCT` directives declares and initializes variables of that structure type within the assembler section in which it appears.

For more information, refer to the `.EXTERN` directive [on page 1-45](#) and the `.STRUCT` directive [on page 1-45](#).

Example:

```
.IMPORT "CHeaderFile.h";
.IMPORT "ACME_IIir.h","ACME_IFir.h";
.SECTION program;
    // ... code that uses CHeaderFile, ACME_IIir, and
    // ACME_IFir C structs
```

.LEFTMARGIN, Set the Margin Width of a Listing File

The `.LEFTMARGIN` directive sets the margin width of a listing page. It specifies the number of empty spaces at the left margin of the listing file (`.LST`), which the assembler produces when you use the `-l` switch. In the absence of the `.LEFTMARGIN` directive, the assembler leaves no empty spaces for the left margin.

The assembler checks the `.LEFTMARGIN` and `.PAGewidth` values against one another. If the specified values do not allow enough room for a properly formatted listing page, the assembler issues a warning and adjusts the directive that was specified last to allow an acceptable line width.

Syntax:

```
.LEFTMARGIN expression;
```

where

expression — evaluates to an integer from 0 to 100. Default is 0. Therefore, the minimum left margin value is 0 and maximum left margin value is 100. To change the default setting for the entire listing, place the `.LEFTMARGIN` directive at the beginning of your assembly source file.

Example:

```
.LEFTMARGIN 9;    /* the listing line begins at column 10. */
```



You can set the margin width only once per source file. If the assembler encounters multiple occurrences of the `.LEFTMARGIN` directive, it ignores all of them except the last directive.

.LIST/.NOLIST, Listing Source Lines and Opcodes

The `.LIST/.NOLIST` directives (on by default) turn on and off the listing of source lines and opcodes.

If `.NOLIST` is in effect, no lines in the current source, or any nested source, will be listed until a `.LIST` directive is encountered in the same source, at the same nesting level. The `..NOLIST` directive operates on the next source line, so that the line containing a `.NOLIST` will appear in the listing (and thus account for the missing lines).

The `.LIST/.NOLIST` directives do not take any qualifiers or arguments.

Syntax:

```
.LIST;
```

```
.NOLIST;
```

These directives can appear multiple times anywhere in a source file, and their effect depends on their location in the source file.

.LIST_DATA/.NOLIST_DATA, Listing Data Opcodes

The `.LIST_DATA/.NOLIST_DATA` directives (off by default) turn the listing of data opcodes on or off. If `.NOLIST_DATA` is in effect, opcodes corresponding to variable declarations will not be shown in the opcode column. Nested source files inherit the current setting of this directive pair, but a change to the setting made in a nested source file will not affect the parent source file.

The `.LIST_DATA/.NOLIST_DATA` directives do not take any qualifiers or arguments.

Syntax:

```
.LIST_DATA;  
.NOLIST_DATA;
```

These directives can appear multiple times anywhere in a source file, and their effect depends on their location in the source file.

.LIST_DATFILE/.NOLIST_DATFILE, Listing Data Initialization Files

The `.LIST_DATFILE/.NOLIST_DATFILE` directives (off by default) turn the listing of data initialization files on or off. Nested source files inherit the current setting of this directive pair, but a change to the setting made in a nested source file will not affect the parent source file.

The `.LIST_DATFILE/.NOLIST_DATFILE` directives do not take any qualifiers or arguments.

Syntax:

```
.LIST_DATFILE;  
.NOLIST_DATFILE;
```

These directives can appear multiple times anywhere in a source file, and their effect depends on their location in the source file. They are used in assembly source files, but not in data initialization files.

.LIST_DEFTAB, Set the Default Tab Width for Listings

Tab characters in source files are expanded to blanks in listing files under the control of two internal assembler parameters that set the tab expansion width. The default tab width is normally in control, but it can be overridden if the local tab width is explicitly set with a directive.

The `.LIST_DEFTAB` directive sets the default tab width while the `.LIST_LOCTAB` directive sets the local tab width (see [on page 1-57](#)).

Both the default tab width and the local tab width can be changed any number of times via the `.LIST_DEFTAB` and `.LIST_LOCTAB` directives. The default tab width is inherited by nested source files, but the local tab width only affects the current source file.

Syntax:

```
.LIST_DEFTAB expression;
```

where

expression — evaluates to an integer greater than or equal to 0.
A value of 0 sets the current default tab width to the assembler's initial default tab width. In the absence of a `.LIST_DEFTAB` directive, the default tab width defaults to 4.

Example:

```
// Tabs here are expanded to the default of 4 columns
.LIST_DEFTAB 8;
// Tabs here are expanded to 8 columns
.LIST_LOCTAB 2;
// Tabs here are expanded to 2 columns
// But tabs in "include_1.h" will be expanded to 8 columns
#include "include_1.h"
.LIST_DEFTAB 4;
// Tabs here are still expanded to 2 columns
// But tabs in "include_2.h" will be expanded to 4 columns
#include "include_2.h"
```

.LIST_LOCTAB, Set the Local Tab Width for Listings

Tab characters in source files are expanded to blanks in listing files under the control of two internal assembler parameters that set the tab expansion width. The default tab width is normally in control, but it can be overridden if the local tab width is explicitly set with a directive.

The `.LIST_LOCTAB` directive sets the local tab width, and the `.LIST_DEFTAB` directive sets the default tab width (see [on page 1-56](#)).

Both the default tab width and the local tab width can be changed any number of times via the `.LIST_DEFTAB` and `.LIST_LOCTAB` directives. The default tab width is inherited by nested source files, but the local tab width only affects the current source file.

Syntax:

```
.LIST_LOCTAB expression;
```

where

expression — evaluates to an integer greater than or equal to 0.
A value of 0 sets the local tab width to the current setting of the default tab width.

In the absence of a `.LIST_LOCTAB` directive, the local tab width defaults to the current setting for the default tab width.

Example: See the `.LIST_DEFTAB` example [on page 1-56](#).

.LIST_WRAPDATA/.NOLIST_WRAPDATA

The `.LIST_WRAPDATA/.NOLIST_WRAPDATA` directives control the listing of opcodes that are too big to fit in the opcode column. By default, the `.NOLIST_WRAPDATA` directive is in effect.

This directive pair applies to any opcode that would not fit, but in practice, such a value will almost always be data (alignment directives can also result in large opcodes).

- If `.LIST_WRAPDATA` is in effect, the opcode value is wrapped so that it fits in the opcode column (resulting in multiple listing lines).
- If `.NOLIST_WRAPDATA` is in effect, the printout is what fits in the opcode column.

Nested source files inherit the current setting of this directive pair, but a change to the setting made in a nested source file will not affect the parent source file.

The `.LIST_WRAPDATA/.NOLIST_WRAPDATA` directives do not take any qualifiers or arguments.

Syntax:

```
.LIST_WRAPDATA;
```

```
.NOLIST_WRAPDATA;
```

These directives can appear multiple times anywhere in a source file, and their effect depends on their location in the source file.

.NEWPAGE, Insert a Page Break in a Listing File

The `.NEWPAGE` directive inserts a page break in the printed listing file (`.LST`), which the assembler produces when you use the `-l` switch. The assembler inserts a page break at the location of the `.NEWPAGE` directive.

The `.NEWPAGE` directive does not take any qualifiers or arguments.

Syntax:

```
.NEWPAGE ;
```

This directive may appear anywhere in your source file. In the absence of the `.NEWPAGE` directive, the assembler generates no page breaks in the file.

.PAGELENGTH, Set the Page Length of a Listing File

The `.PAGELENGTH` directive controls the page length of the listing file produced by the assembler when you use the `-l` switch.

Syntax:

```
.PAGELENGTH expression;
```

where

expression—evaluates to an integer of equal or greater than 10, or 0. It specifies the number of text lines per printed page. The default page length is now 0, which means the listing will have no page breaks.

To format the entire listing, place the `.PAGELENGTH` directive at the beginning of your assembly source file. If a page length value greater than 0 is too small to allow a properly formatted listing page, the assembler will issue a warning and use its internal minimum page length (approximately 10 lines).

Example:

```
.PAGELENGTH 50;    // starts a new page after printing 50 lines
```



You can set the page length only once per source file. If the assembler encounters multiple occurrences of the directive, it ignores all of them except the last directive.

.PAGewidth, Set the Page Width of a Listing File

The `.PAGewidth` directive sets the page width of the listing file produced by the assembler when you use the `-l` switch.

Syntax:

```
.PAGewidth expression;
```

where

expression — evaluates to an integer 0 or greater.

It specifies the maximum number of characters per row in the printed output. In the absence of the `.PAGewidth` directive, a new line begins after 72 characters are printed on the preceding line.

To change the default number of characters per line in the entire listing, place the `.PAGewidth` directive at the beginning of the assembly source file.

Example:

```
.PAGewidth 36;    // starts a new line after 36 characters
                  // are printed on one line
```



You can set the page width only once per source file. If the assembler encounters multiple occurrences of the directive, it ignores all of them except the last directive.

.PREVIOUS, Revert to the Previously Defined Section

The `.PREVIOUS` directive instructs the assembler to set the current section in memory to the section that has been described immediately before the current one. The `.PREVIOUS` directive operates on a stack.

Syntax:

```
.PREVIOUS;
```

The following examples provide illegal and legal cases of the use of the consecutive `.PREVIOUS` directives.

Example of Illegal Directive Use

```
.SECTION data1;      // data
.SECTION code;       // instructions
.PREVIOUS;           // previous section ends, back to data1
.PREVIOUS;           // no previous section to set to
```

Example of Legal Directive Use

```
#define MACR01 \
.SECTION data2; \
    .VAR vd = 4; \
.PREVIOUS;
.SECTION data1;      // data
    .VAR va = 1;
.SECTION program;    // instructions
    .VAR vb = 2;
    MACR01            // invoke macro
.PREVIOUS;          \
    .VAR vc = 3;
```

evaluates as:

```
.SECTION data1;      // data
    .VAR va = 1;
.SECTION program;    // instructions
    .VAR vb = 2;
```

```
        // Start MACR01
.SECTION data2;
        .VAR vd = 4;
.PREVIOUS;                // end data2, section code
        // End MACR01
.PREVIOUS;                // end program, start data1
        .VAR vc = 3;
```

.SECTION, Declare a Memory Section

The `.SECTION` directive marks the beginning of a logical section mirroring an array of contiguous locations in your processor memory. Statements between one `.SECTION` and the following `.SECTION` directive, or the end-of-file instruction, comprise the content of the section.

Syntax:

```
.SECTION[/qualifier1][/qualifier2] sectionName [sectionType];
```

where

- *qualifier1* and *qualifier2* can be one of:

DOUBLE32	DOUBLES are represented as 32-bit types
DOUBLE64	DOUBLES are represented as 64-bit types
DOUBLEANY	Section does not include code that depends on the size of DOUBLE
CHAR8	CHARs are represented as 8-bit types. Shorts are represented as 16-bit types.
CHAR32	CHARs are represented as 32-bit types. Shorts are represented as 32-bit types.
CHARANY	Section does not include code that depends on the size of char or short

The `double` size qualifiers and `char` size qualifiers are used to ensure that object files are consistent when linked together and with run-time libraries. A section may have a `double` size qualifier and a `char` size qualifier. It cannot have two `double` size qualifiers or two `char` size qualifiers. Sections in the same file do not have to have the same type size qualifiers.

Note: Use of `DOUBLEANY` and `CHARANY` in a section implies that doubles, char and shorts are not used in this section in any way that would require consistency checking with any other section.

- *sectionName* — section name symbol which is not limited in length and is case-sensitive. Section names must match the corresponding input section names used by the .LDF file to place the section. Use the default .LDF file included in the `... \TS\ldf` subdirectory of the VisualDSP++ installation directory, or write your own LDF.

Note: Some sections starting with “.” names have certain meaning within the linker. The dot (.) should not be used as the initial character in *sectionName*.

- *sectionType* — an optional ELF section type identifier. The assembler uses the default `SHT_PROGBITS` when this identifier is absent. Valid *sectionTypes* are described in the `ELF.h` header file, which is available from third-party software development kits.

For more information on the ELF file format, see the *VisualDSP++ 3.0 Linker and Utilities Manual for TigerSHARC DSPs*.

Example:

```
/* Declared below memory sections correspond to the default
   LDF's input sections. */
.SECTION/char32 data1;          // memory section to store data
.SECTION/char32 program;       // memory section to store code
...
```

.STRUCT, Create a Struct Variable

The `.STRUCT` directive allows you to define and initialize high-level data objects within the assembly code. The `.STRUCT` directive creates a struct variable using a C-style *typedef* as its guide from `.IMPORT C` header files.

Syntax:

```
.STRUCT typedef structName;  
.STRUCT typedef structName = {};  
.STRUCT typedef structName = { struct-member-initializers  
    [ ,struct-member-initializers... ] };  
.STRUCT typedef ArrayOfStructs [] =  
    { struct-member-initializers  
    [ ,struct-member-initializers... ] };
```

where

typedef — the type definition for a struct VAR

structName — a struct name

struct-member-initializers — per struct member initializers

The { } curly braces are used for consistency with the C initializer syntax. Initialization can be in “long” or “short” form where data member names are not included. The short form corresponds to the syntax in C compiler struct initialization with these changes:

- Change C compiler keyword “struct” to “.struct”
- Change C compiler constant string syntax “MyString” to 'MyString'

The long form is assembler specific and provides the following benefits:

- Provides better error checking
- Supports self-documenting code

- Protects from possible future changes to the layout of the `struct`. If an additional member is added before the member is initialized, the assembler will continue to offset to the correct location for the specified initialization and zero-initialize the new member.

Any members that are not present in a long-form initialization are initialized to zero. For example, if the `struct StructThree` has three members (`member1`, `member2`, and `member3`), and

```
.STRUCT StructThree myThree {
    member1 = 0xaa,
    member3 = 0xff
};
```

then `member2` will be initialized to 0 because no initializer was present for it. If no initializers are present, the entire `struct` is zero-initialized.

If data member names are present, the assembler validates that the assembler and compiler are in agreement about these names. The initialization of data `struct` members declared via the assembly `.STRUCT` directive is processor-specific.

Example 1. Long-Form `.STRUCT` Directive

```
#define NTSC 1
    // contains layouts for playback and capture_hdr
.IMPORT "comdat.h";
.STRUCT capture_hdr myLastCapture = {
    captureInt = 0,
    captureString = 'InitialState'
};
.STRUCT myPlayback playback = {
    theSize = 0,
    ready = 1,
    stat_debug = 0,
    last_capture = myLastCapture,
    watchdog = 0,
    vidtype = NTSC
};
```

Example 2. Short-Form .STRUCT Directive

```
#define NTSC 1
    // contains layouts for playback and capture_hdr
    .IMPORT "comdat.h";
    .STRUCT capture_hdr myLastCapture = { 0, 'InitialState' };
    .STRUCT playback myPlayback = { 0, 1, 0, myLastCapture, 0, NTSC };
```

Example 3. Long-Form .STRUCT Directive to Initialize an Array

```
.STRUCT structWithArrays XXX = {
    scalar = 5,
    array1 = { 1,2,3,4,5 },
    array2 = { "file1.dat" },
    array3 = "WithBraces.dat" // must have { } within dat
};
```

In the short-form, nested braces can be used to perform partial initializations as in C. In Example 4 below, if the second member of the struct is an array with more than four elements, the remaining elements will be initialized to zero.

Example 4. Short-Form .STRUCT Directive to Initialize an Array

```
.STRUCT structWithArrays XXX = { 5, { 1,2,3,4 }, 1, 2 };
```

Example 5. Initializing a Pointer

A struct may contain a pointer. Initialize pointers with symbolic references.

```
.EXTERN outThere;
.VAR myString[] = 'abcde',0;
.STRUCT structWithPointer PPP = {
    scalar = 5,
    myPtr1 = myString,
    myPtr2 = outThere
};
```

Example 6. Initializing a Nested Structure

A struct may contain a struct. Use fully qualified references to initialize nested struct members. The struct name is implied.

For example, the reference “scalar” (“nestedOne->scalar” implied) and “nested->scalar1” (“nestedOne->nested->scalar1” implied).

```
.STRUCT NestedStruct nestedOne = {  
    scalar = 10,  
    nested->scalar1 = 5,  
    nested->array = { 0x1000, 0x1010, 0x1020 }  
};
```

.TYPE, Change Default Symbol Type

The `.TYPE` directive directs the assembler to change the default symbol type of an object. This directive may appear in the compiler-generated assembly source file (`.S`).

Syntax:

```
.TYPE symbolName, symbolType;
```

where

symbolName — the name of the object to which the *symbolType* should be applied.

symbolType — an ELF symbol type `STT_*`. Valid ELF symbol types are listed in the `ELF.h` header file. By default, a label has an `STT_FUNC` symbol type, and a variable or buffer name defined in a storage directive has an `STT_OBJECT` symbol type.

.VAR, Declare a Data Variable or Buffer

The `.VAR` directive declares and optionally initializes variables and data buffers. A variable uses a single memory location, and a data buffer uses an array of memory locations.

When declaring or initializing variables:

- A `.VAR` directive may appear only within a section. The assembler associates the variable with the memory type of the section in which the `.VAR` appears.
- A single `.VAR` directive can declare any number of variables or buffers, separated by commas, on one line.

Unless the absolute placement for a variable is specified with the `RESOLVE()` command (from an `.LDF` file), the linker places variables in consecutive memory locations. For example, `.VAR d,f,k[50]`; sequentially places symbols `x`, `y` and 50 elements of the buffer `z` in the DSP memory. Therefore, code example may look as:

```
.VAR d;
.VAR f;
.VAR k[50];
```

- The number of initializer values may not exceed the number of variables or buffer locations that you declare.
- The `.VAR` directive may declare an implicit-size buffer by using empty brackets `[]`. The number of initialization elements defines the *length* of the implicit-size buffer. For implicit-size buffer initialization, the elements must appear within curly brackets `{ }`. At runtime, the length operator can be used to determine the buffer size. For example,

```
.SECTION data1;
    .VAR buffer [] = {1,2,3,4};

.SECTION program;
    KLO = LENGTH( buffer );;    // Returns 4
```

Syntax:

The `.VAR` directive takes one of the following forms:

```
.VAR varName1 [, varName2, ...];  
.VAR = initExpression1, initExpression2, ...;  
.VAR varName1 = initexpression1 [, varName2 = initexpression2, ...];  
.VAR bufferName[] = initExpression1, initExpression2, ...;  
.VAR bufferName[] = "fileName";  
.VAR bufferName[length] = "fileName";  
.VAR bufferName1[length] [, bufferName2[length], ...];  
.VAR bufferName[length] = initExpression1, initExpression2, ...;
```

where:

- *varName* —represents user-defined symbols that identify variables.
- *bufferName* —represents user-defined symbols that identify buffers.
- *fileName* parameter—indicates that the elements of a buffer get their initial values from the *fileName* data file. The `<fileName>` can consist of the actual name and path specification for the data file. If the initialization file is in current directory of your operating system, only the *fileName* need be given quotes.

Initializing from files is useful for loading buffers with data, such as filter coefficients or FFT phase rotation factors that are generated by other programs. The assembler determines how the values are stored in memory when it reads the data files.

- Ellipsis (...)—represents a comma-delimited list of parameters.
- [*length*]—optional parameter that defines the length (in words) of the associated buffer. When length is not provided, the buffer size is determined by the number of initializers.

- Brackets ([])—enclosing the optional [*length*] is required. For more information, see the following `.VAR` examples.
- *initExpressions* parameters—set initial values for variables and buffer elements.



Use a `/R32` qualifier (`.VAR/R32`) to support 32-bit initialization for use with 1.31 fracts (see [on page 1-30](#)).

The following lines of code demonstrate some `.VAR` directives:

```
.VAR samples[] = 10, 11, 12, 13, 14;
    // declare and initialize an implicit-length buffer
    // since there are five values, this has the same effect
    // as samples[5]
.VAR Ins, Outs, Remains;
    // declare three uninitialized variables
.VAR samples[100] = "inits.dat";
    // declare a 100-location buffer and initialize it
    // with the contents of the inits.dat file;
.VAR taps=100;
    // declare a variable and initialize the variable
    // to 100
.VAR twiddles[10] = "phase.dat";
    // declare a 10-location buffer and load the buffer
    // with the contents of the phase.dat file
.VAR/R32 Fract_Var_R32[] = "fr32FormatFract.dat";
```

.VAR and ASCII String Initialization Support

The `easmts` assembler supports ASCII string initialization. This allows the full use of the ASCII character set, including digits and special characters. The characters are stored in the upper byte of 32-bit words. The LSBs are cleared.

Assembler Syntax Reference

String initialization takes one of the following forms:

```
.VAR symbolString[length] = 'initString', 0;  
.VAR symbolString[] = {'initString', 0};
```

Note that the number of initialization characters defines length of a string (and implicit-size initialization requires the use of curly brackets).

For example,

```
.VAR x[13] = 'Hello world!', 0;  
.VAR x[] = {'Hello world!', 0};
```

The trailing zero character is optional. It simulates ANSI-C string representation.

.WEAK, Support a Weak Symbol Definition and Reference

The `.WEAK` directive supports weak binding for a symbol. Use this directive where the symbol is defined, replacing the `.GLOBAL` directive to make a weak definition and the `.EXTERN` directive to make a weak reference.

Syntax:

```
.WEAK symbol;
```

where

symbol — the user-defined symbol

While the linker will generate an error if two objects define global symbols with identical names, it will allow any number of instances of weak definitions of a name. All will resolve to the first, or to a single, global definition of a symbol.

One difference between `.EXTERN` and `.WEAK` references is that the linker will not extract objects from archives to satisfy weak references. Such references, left unresolved, have the value of 0.



The `.WEAK` (or `.GLOBAL` scope) directive is required for symbols that appear in the `RESOLVE` commands in the `.LDF` file.

Assembler Command-Line Reference

This section describes the assembler command-line interface and switch set. It describes the assembler's switches, which are accessible from the operating system's command line or from the VisualDSP++ environment.

This section contains:

- [“Running the Assembler” on page 1-77](#)
- [“Assembler Command-Line Switch Summary” on page 1-79](#)
- [“Assembler Command-Line Switch Descriptions” on page 1-81](#)

Command-line switches control certain aspects of the assembly process, including debugging information, listing, and preprocessing. Because the assembler automatically runs the preprocessor as your program is assembled (unless you use the `-sp` switch), the assembler's command line can receive input for the preprocessor program and direct its operation. For more information on the preprocessor, see Chapter 2 [“Preprocessor”](#).



When developing a DSP project, you may find it useful to modify the assembler's default options settings. The way you set the assembler's options depends on the environment used to run the DSP development software.

See [“Specifying Assembler Options in VisualDSP++” on page 1-90](#) for more information.

Running the Assembler

To run the assembler from the command line, type the name of the assembler program followed by arguments in any order, and the name of the assembly source file.

```
easmts [ -switch1 [ -switch2 ... ] ] sourceFile
```

where:

easmts—name of the assembler program for TigerSHARC processors.

-switch— switch (or switches) to process.

The command-line interface offers many optional switches that select operations and modes for the assembler and preprocessor. Some assembler switches take a file name as a required parameter.

sourceFile — name of the source file to assemble.

The name of the source file to assemble can be provided as:

- *ShortFileName* — a file name without quotes (no special characters)
- *LongFileName* — a quoted file name (may include spaces and other special path name characters)

The assembler outputs a list of command-line options when run without arguments (same as `-h[elp]`).

The assembler supports relative and absolute path names. When you specify an input or output file name as a parameter, follow these guidelines for naming files:

- Include the drive letter and path string if the file is not in the current project directory.

Assembler Command-Line Reference

- Enclose long file names in double quotation marks; for example, “long file name”.
- Append the appropriate file name extension to each file.

Table 1-9 summarizes file extension conventions accepted by the VisualDSP++ environment.

Table 1-9. File Name Extension Conventions

Extension	File Description
.asm	Assembly source file Note: The assembler treats files with unrecognized extensions as assembly source files.
.is	Preprocessed assembly source file
.h	Header file
.lst	Listing file
.doj	Assembled object file in ELF/DWARF-2 format
.dat	Data initialization file

Assembler command-line switches are case-sensitive. For example, the following command line

```
easmts -proc ADSP-TS101 -l pList.lst -Dmaximum=100 -v -o bin\p1.doj p1.asm
```

runs the assembler with

-proc ADSP-TS101 — specifies assembles instructions unique to ADSP-TS101 DSPs.

-l pList.lst — directs the assembler to output the listing file.

-Dmaximum=100 — defines the preprocessor macro `maximum` to be 100.

-v — displays verbose information on each phase of the assembly.

`-o bin\p1.doj` — specifies the name and directory for the assembled object file.

`p1.asm` — identifies the assembly source file to assemble.

Assembler Command-Line Switch Summary

This section describes the assembler command-line switches in ASCII collation order. A summary of the assembler switches appears in [Table 1-10](#). Refer to [“Assembler Command-Line Switch Descriptions”](#) starting [on page 1-81](#) for a detailed description of each assembler switch.

Table 1-10. Assembler Command-Line Switch Summary

Switch Name	Purpose
<code>-align-branch-lines</code> (on page 1-83)	Align branch lines to avoid ADSP-TS101 processor sequencer anomaly.
<code>-char-size-8</code> (on page 1-82)	Adds <code>/CHAR8</code> to <code>.SECTIONs</code> in the source file.
<code>-char-size-32</code> (on page 1-82)	Adds <code>/CHAR32</code> to <code>.SECTIONs</code> in the source file.
<code>-char-size-any</code> (on page 1-82)	Adds <code>/CHARANY</code> to <code>.SECTIONs</code> in the source file.
<code>-default-branch-np</code> (on page 1-83)	Make branch lines default to NP to avoid ADSP-TS101 processor sequencer anomaly.
<code>-default-branch-p</code> (on page 1-83)	Make branch lines default to the Branch Target Buffer (BTB).
<code>-Dmacro[=definition]</code> (on page 1-83)	Passes macro definition to the preprocessor.
<code>-double-size-32</code> (on page 1-83)	Adds <code>/DOUBLE32</code> to the <code>.SECTIONs</code> in the source file.
<code>-double-size-64</code> (on page 1-83)	Adds <code>/DOUBLE64</code> to the <code>.SECTIONs</code> in the source file.

Assembler Command-Line Reference

Table 1-10. Assembler Command-Line Switch Summary (Cont'd)

Switch Name	Purpose
<code>-double-size-any</code> (on page 1-84)	Adds <code>/DOUBLEANY</code> to the <code>.SECTIONS</code> in the source file.
<code>-flags-compiler -opt1 [, -opt2...]</code> (on page 1-84)	Passes each comma-separated option to the compiler. (Used when compiling <code>.IMPORT C</code> header files.)
<code>-flags-pp -opt1 [, -opt2...]</code> (on page 1-85)	Passes each comma-separated option to the preprocessor.
<code>-g</code> (on page 1-85)	Generates debug information (DWARF-2 format).
<code>-h[elp]</code> (on page 1-85)	Outputs a list of assembler switches.
<code>-i I pathname</code> (on page 1-85)	Searches a directory for included files.
<code>-l filename</code> (on page 1-86)	Outputs the named listing file.
<code>-li filename</code> (on page 1-86)	Outputs the named listing file with <code>#include</code> files expanded.
<code>-M</code> (on page 1-87)	Generates make dependencies for <code>#include</code> and data files only; does not assemble. For example, <code>-M</code> suppresses the creation of an object file.
<code>-MM</code> (on page 1-87)	Generates make dependencies for <code>#include</code> and data files. Use <code>-MM</code> for make dependencies with assembly.
<code>-Mo filename</code> (on page 1-88)	Writes make dependencies to the <i>filename</i> specified. The <code>-Mo</code> option is for use with either the <code>-M</code> or <code>-MM</code> option. If <code>-Mo</code> is not present, the default is <code><stdout></code> display.
<code>-Mt filename</code> (on page 1-88)	Specifies the make dependencies target name. The <code>-Mt</code> option is for use with either the <code>-M</code> or <code>-MM</code> option. If <code>-Mt</code> is not present, the default is base name plus <code>'doj'</code> .
<code>-o filename</code> (on page 1-88)	Outputs the named object [binary] file.

Table 1-10. Assembler Command-Line Switch Summary (Cont'd)

Switch Name	Purpose
<code>-pp</code> (on page 1-89)	Runs the preprocessor only; does not assemble.
<code>-oprocprocessor</code> (on page 1-89)	Specifies a target processor for which the assembler should produce suitable code.
<code>-sp</code> (on page 1-89)	Assembles without preprocessing.
<code>-v[erbose]</code> (on page 1-90)	Displays information on each assembly phase.
<code>-version</code> (on page 1-90)	Displays version information for the assembler and preprocessor programs.
<code>-w</code> (on page 1-90)	Disables all assembler-generated warnings.
<code>-Wnumber[,number ...]</code> (on page 1-90)	Selectively disables warnings by one or more message numbers. For example, <code>-W1092</code> disables warning message <code>ea1092</code> .

Assembler Command-Line Switch Descriptions

A description of each command-line switch includes information about case-sensitivity, equivalent switches, switches overridden/contradicted by the one described, and naming and spacing constraints on parameters.

-align-branch-lines

The `-align-branch-lines` switch directs the assembler to align branch instructions (`JUMP`, `CALL`, `CJMP`, `CJMP_CALL`, `RETI`, and `RTI`) on quad-word boundaries by inserting `NOP` instructions prior to the branch instruction. This may be done by adding `NOPs` in free slots in previous instruction lines.

Note: This option is only supported on the ADSP-TS101 processor and can be used to avoid the sequencer anomaly.

-char-size-8

The `-char-size-8` switch directs the assembler to add `/CHAR8` to `.SECTIONS` in the source file that do not have `char` size qualifiers. For `.SECTIONS` in the source file that already have a `char` size qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-char-size-32

The `-char-size-32` switch directs the assembler to add `/CHAR32` to `.SECTIONS` in the source file that do not have `char` size qualifiers. For `.SECTIONS` in the source file that already have a `char` size qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-char-size-any

The `-char-size-any` switch directs the assembler to add `/CHARANY` to `.SECTIONS` in the source file that do not have `char` size qualifiers. For `.SECTIONS` in the source file that already have a `char` size qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-default-branch-np

The `-default-branch-np` (branch lines default to NP) switch directs the assembler to stop branch instructions (`JUMP`, `CALL`) from using the Branch Target Buffer (BTB). This can be used to avoid a sequencer anomaly present on the ADSP-TS101 processor only. It is still possible to make branch instructions use the BTB when `-default-branch-np` is used by adding the `(P)` instruction option; for example, `"JUMP lab1 (P);;"`.

-default-branch-p

The `-default-branch-p` switch makes branch instructions (JUMP CALL) use the Branch Target Buffer (BTB). This is the default behavior. It is still possible to make branch instructions not use the BTB when `-default-branch-p` is used by adding the (NP) instruction option; for example, "JUMP label (NP);;".

-Dmacro[=definition]

The `-D` (define macro) switch directs the assembler to define a macro and pass it to the preprocessor. See [“Using Assembler Feature Macros” on page 1-15](#) for the list of predefined macros. For example,

```
-Dinput           // defines input as 1
-Dsamples=10      // defines samples as 10
-Dpoint='Start'   // defines point as the string 'Start'
```

-double-size-32

The `-double-size-32` switch directs the assembler to add `/DOUBLE32` to `.SECTIONS` in the source file that do not have `double` size qualifiers. For `.SECTIONS` in the source file that already have a `double` size qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-double-size-64

The `-double-size-64` switch directs the assembler to add `/DOUBLE64` to `.SECTIONS` in the source file that do not have `double` size qualifiers. For `.SECTIONS` in the source file that already have a `double` size qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-double-size-any

The `-double-size-any` switch directs the assembler to add `/DOUBLEANY` to `.SECTIONS` in the source file that do not have `double size` qualifiers. For `.SECTIONS` in the source file that already have a `double size` qualifier, this option is ignored and a warning is produced. For more information, see [“.SECTION, Declare a Memory Section” on page 1-64](#).

-flags-compiler

The `-flags-compiler -opt1 [-opt2...]` switch passes each comma-separated option to the C compiler. The switch takes a list of one or more comma-separated compiler options that are passed on the compiler command line for compiling `.IMPORT` headers. The assembler calls the compiler to process each header file in an `.IMPORT` directive. It calls the compiler with the `-debug-types` option along with any `-flags-compiler` options given on the assembler command line. For example,

```
// file.asm has .IMPORT "myHeader.h";
easmts -proc ADSP-TS201 -flags-compiler -I\Path -I. file.asm
```

The rest of the assembly program, including its `#include` files, are processed by the assembler preprocessor. The `-flags-compiler` switch processes a list of one or more legal C compiler options, including `-D` and `-I` options.

User-Specified Defines Options

The `-D` (defines) options on the assembler command line are passed to the assembler preprocessor, but they are not passed to the compiler for `.IMPORT` header processing. If you have `#defines` for the `.IMPORT` header compilation, they must be explicitly specified with the `-flags-compiler` switch. For example,

```
// file.asm has .IMPORT "myHeader.h";
easmts -proc ADSP-TS201 -DaDef -flags-compiler -DbDef -DbDefTwo=2. file.asm
```

```
// -DaDef is not passed to the compiler
ccts -proc ADSP-TS201 -c -debug-types -DbDef -DbDefTwo=2 myHeader.h
```

 See [“Using Assembler Feature Macros” on page 1-15](#) for the list of predefined macros, including default macros.

-flags-pp -opt1 [-opt2...]

The `-flags-pp` switch passes each comma-separated option to the preprocessor.

 Use `-flags-pp` with caution. For example, if the `pp` legacy comment syntax is enabled, the comment characters become unavailable for non-comment syntax.

-g

The `-g` (generate debug information) switch directs the assembler to generate line number and symbol information in DWARF-2 binary format, allowing you to debug the assembly source files.

-h[elp]

The `-h` or `-help` switch directs the assembler to output to standard out a list of command-line switches with a syntax summary.

-i | I directory

The `-i` `directory` or `-I` `directory` (include directory) switch directs the assembler to append the specified directory or a list of directories separated by semicolons (;) to the search path for included files. These files are:

- Header files (`.h`) included with the `#include` preprocessor command
- Data initialization files (`.dat`) specified with the `.VAR` assembly directive

Assembler Command-Line Reference

The assembler passes this information to the preprocessor; the preprocessor searches for included files in the following order:

1. Current project directory (.DPJ)
2. ...\\ts\\include subdirectory of the VisualDSP++ installation directory
3. Specified directory (or list of directories). The order of the list defines the order of multiple searches.

Current directory is your *.dpj project directory, not the directory of the assembler program. It is recommended to use full path names for the -I switch on the command line. For example,

```
easmts -I \\bin\\include.
```

-l filename

The -l *filename* (listing) switch directs the assembler to generate the named listing file. Each listing file (.LST) shows the relationship between your source code and instruction opcodes that the assembler produces. For example,

```
easmts -proc ADSP-TS201 -I\\path -I. -l file.lst file.asm
```

The file name is a required argument to the -l option. For more information, see [“Reading a Listing File” on page 1-18](#).

-li filename

The -li (listing) switch directs the assembler to generate the named listing file with #include files. The file name is a required argument to the -li option. For more information, see [“Reading a Listing File” on page 1-18](#).

-M

The `-M` (generate make rule only) assembler switch directs the assembler to generate make dependency rules, which is suitable for the make utility, describing the dependencies of the source file. No object file is generated for `-M` assemblies. For make dependencies with assembly, use `-MM`.

The output, an assembly make dependencies list, is written to `stdout` in the standard command-line format:

```
"target_file": "dependency_file.ext"
```

where *dependency_file.ext* may be an assembly source file, a header file included with the `#include` preprocessor command, a data file, or a header file imported via the `.IMPORT` directive.

The `-Mo filename` switch writes make dependencies to the *filename* specified instead of `<stdout>`. For consistency with the compilers, when the `-o filename` is used with `-M`, the assembler outputs the make dependencies list to the named file. The `-Mo filename` takes precedence if both `-o filename` and `-Mo filename` are used with `-M`.

-MM

The `-MM` (generate make rule and assemble) assembler switch directs the assembler to output a rule, which is suitable for the make utility, describing the dependencies of the source file. The assembly of the source into an object file proceeds normally. The output, an assembly make dependencies list, is written to `stdout`. The only difference between `-MM` and `-M` actions is that the assembling continues with `-MM`. See [“-M”](#) for more information.

-Mo filename

The `-Mo` (output make rule) assembler switch specifies the name of the make dependencies file which the assembler generates when you use the `-M` or `-MM` switch. If `-Mo` is not present, the default is `<stdout>` display. If the named file is not in the current directory, you must provide the path name in double quotation marks (“ ”).



The `-Mo filename` option takes precedence over the `-o filename` option if both are used with `-M`.

-Mt filename

The `-Mt filename` (output make rule for the named object) assembler switch specifies the name of the object file for which the assembler generates the make rule when you use the `-M` or `-MM` switch. If the named file is not in the current directory, you must provide the path name. If `-Mt` is not present, the default is the base name plus the `.doj` extension. See “-M” for more information.

-o filename

The `-o filename` (output file) switch directs the assembler to use the specified *filename* argument for the output file. This switch names the output, whether for conventional production of an object, a preprocessed, assemble-produced file (`.is`), or make dependency (`-M`). If no `-o` is specified, the assembler uses the root input file name for the output and appends a `.doj` extension.

Some examples of this switch syntax are:

```
easmts -proc ADSP-TS201 -pp -o test1.is test.asm
      // preprocessed output goes into test1.is

easmts -proc ADSP-TS201 -o "C:\bin\prog3.doj" prog3.asm
      // specify directory and filename for the object file
```

-pp

The `-pp` (proceed with preprocessing only) switch directs the assembler to run the preprocessor, but stop without assembling the source into an object file. When assembling with the `-pp` switch, the `.is` file is the final result of the assembly. By default, the output file name uses the same root name as the source, with the extension `.is`.

-proc processor

The `-proc processor` (target processor) switch specifies that the assembler should produce code suitable for the specified DSP. For TigerSHARC processors, the *processor* identifier has an “ADSP-TSxxx” format. When you enter an identifier for a target processor, it directs the assembler to produce code unique to that processor.

For TigerSHARC processors, the *processor* identifiers are ADSP-TS101 and ADSP-TS201.

For example,

```
easmts -proc ADSP-TS201 -o bin\pl.doj pl.asm
```

If the processor identifier is unknown to the assembler, it attempts to read required switches for code generation from the file `<processor>.ini`. The assembler searches for the `.ini` file in the VisualDSP ++ System folder. For custom processors, the assembler searches the section “`proc`” in the `<processor>.ini` for key ‘`architecture`’. The custom processor must be based on an architecture key that is one of the known DSPs.

For example, `-proc Customxxx` searches the `Customxxx.ini` file.

-sp

The `-sp` (skip preprocessing) switch directs the assembler to assemble the source file into an object file without running the preprocessor. When the assembler skips preprocessing, no preprocessed assembly file (`.is`) is created.

Assembler Command-Line Reference

-v[erbose]

The `-v` or `-verbose` (verbose) switch directs the assembler to display version and command-line information for each phase of assembly.

-version

The `-version` (display version) switch directs the assembler to display version information for the assembler and preprocessor programs.

-w

The `-w` (disable all warnings) switch directs the assembler not to display warning messages generated during assembly.

-Wnumber[,number]

The `-Wnumber` (warning suppression) switch selectively disables warnings specified by one or more message numbers. For example, `-W1092` disables warning message `ea1092`. This switch optionally accepts a list, such as `[,number ...]`.

Specifying Assembler Options in VisualDSP++

When using the VisualDSP++ IDDE, use the **Assemble** property page from the **Project Options** dialog box to set assembler functional options.

For more information on assembler configuration, use the VisualDSP++ online Help.

Callouts in [Figure 1-3 on page 1-91](#) refer to the corresponding assembler command-line switches described in “[Assembler Command-Line Switch Descriptions](#)” on page 1-81. The **Additional options** field is used to enter the appropriate file names and options that do not have corresponding controls on the **Assemble** property page but are available as assembler switches.

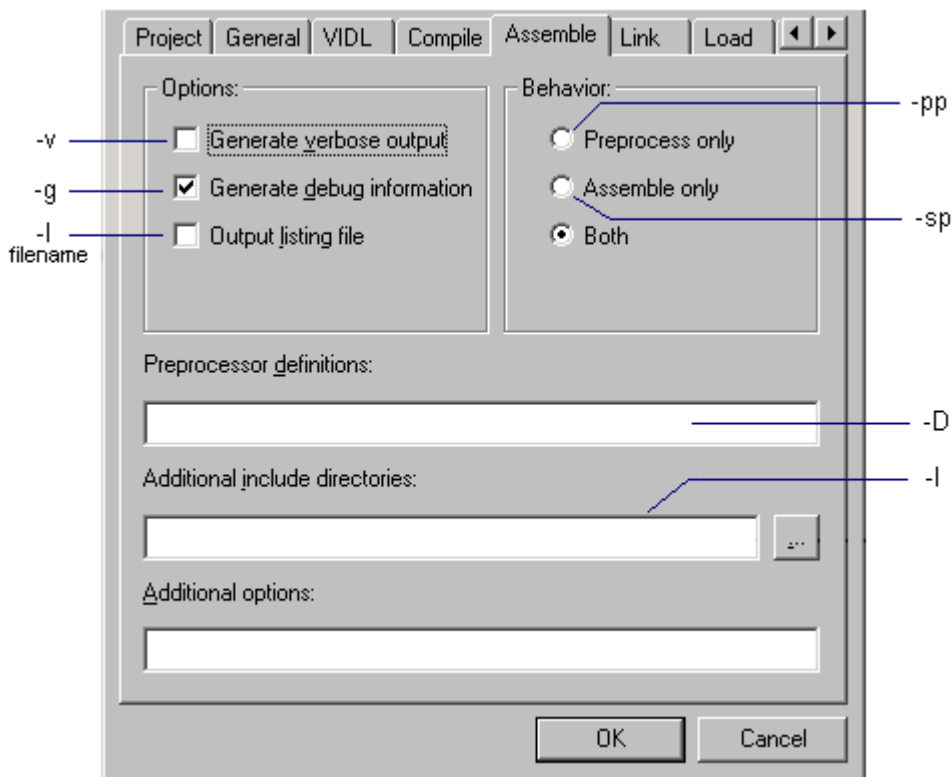


Figure 1-3. Project Options – Assemble Property Page

The assembler options apply to directing calls to `eamsm`s when assembling `*.asm` files. Changing assembler options in VisualDSP++ does not affect the assembler calls made by the compiler during the compilation of `*.c`/`*.cpp` files.

2 PREPROCESSOR

The preprocessor program (`pp.exe`) evaluates and processes preprocessor commands in source files. With these commands, you direct the preprocessor to define macros and symbolic constants, include header files, test for errors, and control conditional assembly and compilation. The preprocessor supports ANSI C standard preprocessing with extensions, such as “?” and “...”.

The `pp` preprocessor is run by other build tools (assembler and linker) from the operating system’s command line or within the VisualDSP++ 3.0 environment. These tools accept command information for the preprocessor and pass it to the preprocessor. The `pp` preprocessor can also operate from the command line with its own command-line switches.

The chapter contains:

- [“Preprocessor Guide” on page 2-2](#)
Contains the information on building programs.
- [“Preprocessor Command Reference” on page 2-10](#)
Describes the preprocessor’s commands, with syntax and usage examples.
- [“Preprocessor Command-Line Reference” on page 2-31](#)
Describes the preprocessor’s command-line switches, with syntax and usage examples.

Preprocessor Guide

This section contains the `pp` preprocessor information on how to build programs from a command line or from the VisualDSP++ 3.0 environment. Software developers using the preprocessor should be familiar with:

- [“Writing Preprocessor Commands”](#)
- [“Header Files” on page 2-4](#)
- [“Writing Macros” on page 2-5](#)
- [“Using Predefined Macros” on page 2-7](#)
- [“Specifying Preprocessor Options” on page 2-9](#)

The compiler also has its own preprocessor that allows you to use preprocessor commands within your C/C++ source. The compiler preprocessor automatically runs before the compiler. This preprocessor is separate from the assembler preprocessor and has some features that may not be used within your assembly source files. For more information, see the *VisualDSP++ 3.0 C/C++ Compiler and Library Manuals* for the target DSPs.

The assembler preprocessor differs from the ANSI C standard preprocessor in several ways. First, the assembler preprocessor supports a `”? ”` operator (see [on page 2-29](#)) that directs the preprocessor to generate a unique label for each macro expansion. Second, the assembler preprocessor does not treat `‘.’` as a separate token. Instead, `‘.’` is always treated as part of an identifier. This behavior matches the assembler’s which uses `’` to start directives and accepts `‘.’` in symbol names. For example,

```
#define VAR my_var  
.  
VAR x;
```

will not cause any change to the variable declaration. The text `‘.VAR’` is treated as a single identifier which does not match the macro name `‘VAR’`.

The standard C preprocessor would treat ‘.VAR’ as two tokens, ‘.’ and ‘VAR’, and will make the following substitution:

```
.my-var x;
```



This preprocessor behavior is introduced in VisualDSP++ 3.0.

The assembler preprocessor also produces assembly-style strings (single quote delimiters) instead of C-style strings.

Finally, the assembler preprocessor supports (under command-line switch control) legacy assembler commenting formats (“!” and “{ }”).

Writing Preprocessor Commands

Preprocessor commands begin with a pound sign (#) and end with a carriage return. The pound sign must be the first non-white space character on the line containing the command. If the command is longer than one line, use a backslash (\) and a carriage return to continue the command on the next line. Do not put any characters between the backslash and the carriage return. Unlike assembly directives, preprocessor commands are case sensitive and must be lowercase.

For more information on preprocessor commands, see [“Preprocessor Command Reference” on page 2-10](#).

For example,

```
#include "string.h"
#define MAXIMUM 100
```

When the preprocessor runs, it modifies your source code by:

- Including system and user-defined header files
- Defining macros and symbolic constants
- Providing conditional assembly and compilation

Preprocessor Guide

You specify preprocessing options with preprocessor commands—lines starting with `#`. Without any commands, the preprocessor performs these three global substitutions:

- Replaces comments with single spaces
- Deletes line continuation characters (`\`)
- Replaces macro references with corresponding expansions

The following cases are notable exceptions to the described substitutions:

- The preprocessor does not recognize comments or macros within the file name delimiters of an `#include` command.
- The preprocessor does not recognize comments or predefined macros within a character or string constant.

Header Files

A header file (`.h`) contains lines of source code to be included (textually inserted) into another source file. Typically, the header file contains declarations and macro definitions. The `#include` preprocessor command includes a copy of the header file at the location of the command. There are two main categories of header files:

System Header Files

These files are used to declare global definitions, especially memory mapped registers, system architecture and processors. Use angle brackets to indicate a system header file.

Example:

```
#include <sys\device.h>
#include <sys\major.h>
```

System header files are installed in the `...\VisualDSP\TS\include` folder.

User Header Files

These files contain declarations for interfaces between the source files of your program. Use double quotes to indicate a user header file.

Example:

```
#include "defTS201.h"
#include "fft_ovly.h"
```

It is a good programming practice to distinguish between system and user header files. The only technical difference between the two different notations is the directory order the assembler searches the specified header file:

The `#include <file>` search order is:

1. include path specified by the `-I` switch (see [on page 2-35](#))
2. VisualDSP\TS\include folder

The `#include "file"` search order is:

1. local directory
2. include path specified by the `-I` switch (see [on page 2-35](#))
3. VisualDSP\TS\include folder

For syntax information and usage examples on the `#include` preprocessor command, see [“#include” on page 2-22](#).

Writing Macros

The preprocessor processes macros in your C, C++, assembly source files, and Linker Description Files (LDF). Macros are useful for repeating instruction sequences in your source code or defining symbolic constants.

The term *macro* defines a macro-identifying symbol and corresponding definition that the preprocessor uses to substitute the macro reference(s). Macros allow text replacement, file inclusion, conditional assembly, conditional compilation, and macro definition.

Preprocessor Guide

Macro definitions start with `#define` and end with a carriage return. If a macro definition is longer than one line, place the backslash character (`\`) at the end of each line except the last, for line continuation. This character indicates that the macro definition continues on the next line and allows to break a long line for cosmetic purposes without changing its meaning.

The macro definition can be any text that would occur in the source file, instructions, commands, or memory descriptions. The macro definition may also have other macro names that will be replaced with their own definitions.

Macro nesting (macros called within another macro) is limited only by the memory that is available during preprocessing. However, recursive macro expansion is not allowed.

Example:

```
#define copy (src,dest) \  
    j0 = src;;          \  
    j1 = dest;;         \  
    R0 =[j0+0];;        \  
    [j1+0] = R0;;
```

A macro can have arguments. When you pass parameters to a macro, the macro serves as a general-purpose routine that is usable in many different programs. The block of instructions that the preprocessor substitutes can vary with each new set of arguments. A macro, however, differs from a subroutine call.

During assembly, each instance of a macro inserts a copy of the same block of instructions, so multiple copies of that code appear in different locations in the object code. By comparison, a subroutine appears only once in the object code, and the block of instructions at that location are executed for every call.

If a macro ends with a semicolon (;), then when it appears in an assembly statement, the semicolon is not needed. However, if a macro does not end with a semicolon character (“;”), it must be followed by the semicolon when appearing in the assembly statement. Users should be consistent in treatment of the semicolon in macro definitions.

For example,

```
#define noparm my_variable_name
#define hasparm(x)x +x
    /*then the code:*/
xr0 =noparm;;
noparm =noparm(10);;    //every instance of noparm replaced
r0 =hasparm;;
hasparm =hasparm(10);;    //only instances of hasparm()replaced
    /*will result in:*/
xr0 =my_variable_name;;
my_variable_name =my_variable_name(10);;
r0 =hasparm;;
hasparm =10 +10;;
```

For more syntax information and usage examples for the `#define` preprocessor command, see [“#define” on page 2-12](#).

Using Predefined Macros

In addition to macros you define, the `pp` preprocessor provides a set of predefined and feature macros that you can use in your assembly code. The preprocessor automatically replaces each occurrence of the macro reference found throughout the program with the specified (predefined) value. The DSP development tools also define feature macros that you can use in your code.



Note that the `__DATE__`, `__FILE__`, and `__TIME__` macros return strings within the single quotation marks (‘ ’) suitable for initialization of character buffers (see [“.VAR and ASCII String Initialization Support” on page 1-73](#)).

Table 2-1 describes the predefined macros provided by the `pp` preprocessor. Table 2-2 lists feature macros that are defined by the DSP tools to specify the architecture and language being processed.

Table 2-1. Predefined Preprocessor Macros

Macro	Definition
ADI	Defines ADI as 1.
__LINE__	The <code>__LINE__</code> macro is replaced with the line number in the source file that the macro appears on.
__FILE__	Defines <code>__FILE__</code> as the name and extension of the file in which the macro is defined, for example, ‘macro.asm’.
__STDC__	Defines <code>__STDC__</code> as 1.
__TIME__	Defines <code>__TIME__</code> as current time in the 24-hour format ‘hh:mm:ss’, for example, ‘06:54:35’.
__DATE__	Defines <code>__DATE__</code> as current date in the format ‘Mm dd yyyy’, for example, ‘Oct 02 2000’.

Table 2-2. Feature Preprocessor Macros

Macro	Definition
__ADSPTS__	Always 1 for TigerSHARC DSP tools
__ADSPTS101__	Equal 1 when used with ASDP-TS101 DSP
__ADSPTS201__	Equal 1 when used with ASDP-TS201 DSP
_LANGUAGE_ASM	Always set to 1
_LANGUAGE_C	Equal 1 when used for C compiler calls to specify <code>.IMPORT</code> headers. Replaces <code>_LANGUAGE_ASM</code> .

Specifying Preprocessor Options

When developing a DSP project, it may be useful to modify the preprocessor's default options. Because the assembler, compiler, and linker automatically run the preprocessor as your program is built (unless you skip the processing entirely), these DSP tools can receive input for the preprocessor program and direct its operation. The way the preprocessor options are set depends on the environment used to run the DSP development software.

You can specify preprocessor options either from the preprocessor's command line or via the VisualDSP++ environment:

- From the operating system command line, select the preprocessor's command-line switches. For more information on these switches, see [“Preprocessor Command-Line Switches” on page 2-32](#).
- In the VisualDSP++ environment, select the preprocessor's options in the **Assemble**, **Compile**, or **Link** tabs (property pages) of the **Project Options** dialog boxes, accessible from the **Project** menu. Refer to [“Specifying Assembler Options in VisualDSP++” on page 1-90](#) for the **Assemble** property page. For more information, see the *VisualDSP++ 3.0 User's Guide for TigerSHARC DSPs* and online Help.

Preprocessor Command Reference

This section provides reference information about the DSP's preprocessor commands and operators used in source code, including their syntax and usage examples. It provides the summary and descriptions of all preprocessor command and operators.

The preprocessor reads code from a source file (`.ASM` or `.LDF`), modifies it according to preprocessor commands, and generates an altered preprocessed source file. The preprocessed source file is a primary input file for the assembler or linker; it is purged when the a binary object file (`.DOJ`) is created.

Preprocessor command syntax must conform to these rules:

- Must be the first non-whitespace character on its line.
- Cannot be more than one line in length unless the backslash character (`\`) is inserted
- Can contain comments containing the backslash character (`\`)
- Cannot come from a macro expansion

The preprocessor operators are special operators when used in a `#define` command.

Preprocessor Commands and Operators

[Table 2-3](#) lists the preprocessor command set. [Table 2-4](#) lists the preprocessor operator set. Sections that begin [on page 2-12](#) describe each of the preprocessor commands and operators.

Table 2-3. Preprocessor Command Summary

Command/Operator	Description
<code>#define</code> (on page 2-12)	Defines a macro
<code>#elif</code> (on page 2-15)	Subdivides an <code>#if ... #endif</code> pair
<code>#else</code> (on page 2-16)	Identifies alternative instructions within an <code>#if ... #endif</code> pair
<code>#endif</code> (on page 2-17)	Ends an <code>#if ... #endif</code> pair
<code>#error</code> (on page 2-18)	Reports an error message
<code>#if</code> (on page 2-19)	Begins an <code>#if ... #endif</code> pair
<code>#ifdef</code> (on page 2-20)	Begins an <code>#ifdef ... #endif</code> pair and tests if macro is defined
<code>#ifndef</code> (on page 2-21)	Begins an <code>#ifndef ... #endif</code> pair and tests if macro is not defined
<code>#include</code> (on page 2-22)	Includes contents of a file
<code>#line</code> (on page 2-23)	Sets a line number during preprocessing
<code>#pragma</code> (on page 2-24)	Takes any sequence of tokens
<code>#undef</code> (on page 2-25)	Removes macro definition
<code>#warning</code> (on page 2-26)	Reports a warning message

Table 2-4. Preprocessor Operator Summary

Command/Operator	Description
<code>#</code> (on page 2-27)	Converts a macro argument into a string constant. OFF by default. Use command-line switch “-stringize” on page 2-37 to enable
<code>##</code> (on page 2-28)	Concatenates two tokens
<code>?</code> (on page 2-29)	Generates unique labels for repeated macro expansions
<code>...</code> (on page 2-13)	Specifies a variable length argument list

Preprocessor Command Reference

#define

The `#define` command defines macros.

When you define a macro in your source code, the preprocessor substitutes each occurrence of the macro with the defined text. Defining this type of macro has the same effect as using the **Find/Replace** feature of a text editor, although it does not replace literals in double quotation marks (“ ”) and it does not replace a match within a larger token.

For macro definitions that are longer than one line, use the backslash character (\) at the end of each line except for the last line. You can add arguments to the macro definition. The arguments are symbols separated by commas that appear within parentheses.

Syntax:

```
#define macroSymbol replacementText  
#define macroSymbol[(arg1,arg2,...)] replacementText
```

where

`macroSymbol` — macro identifying symbol.

`(arg1,arg2,...)` — optional list of arguments enclosed in parenthesis and separated by commas. No space is permitted between the macro name and the left parenthesis. If there is a space, the parenthesis and arguments are treated as part of the definition.

`replacementText` — text to substitute each occurrence of `macroSymbol` in your source code.

Examples:

```
#define BUFFER_SIZE 1020  
/* Defines a macro named BUFFER_SIZE and sets its  
value to 1020.*/
```

```

#define MINIMUM (X, Y) ((X) < (Y)? (X): (Y))
    /* Defines a macro named MINIMUM that selects the
       minimum of two numeric arguments. */
#define copy(src,dest)
xr0=[j31+src ];; \
[j31+dest] = xr0;;
    /* define a macro named copy with two arguments.
       The definition includes two instructions that copy
       a word from memory to memory.
       For example,
           copy (0x3F,0xC0);
       calls the macro, passing parameters to it.
       The preprocessor replaces the macro with the code:
           [xr0 = [j31+0x3F ];;
           [j31+0xC0 ] = xr0;;
    */

```

Variable Length Argument Definitions

The definition of a macro can also be defined with a variable length argument list (using the ... operator). For example,

```
#define test(a, ...) <definition>
```

defines a macro `test` which takes two or more arguments. It is invoked as any other macro, although the number of arguments can vary.

For example,

<code>test(1)</code>	— error; the macro must have at least one more argument than formal parameters, not counting “...”
<code>test(1,2)</code>	— valid entry
<code>test(1,2,3,4,5)</code>	— valid entry

Preprocessor Command Reference

In the macro definition, the identifier `__VA_ARGS__` is available to take on the value of all of the trailing arguments, including the separating commas, all of which are merged to form a single item.

For example,

```
#define test(a, ...) bar(a); testbar(__VA_ARGS__);
```

expands as

```
test (1,2) -> bar(1); testbar(2);
```

```
test (1,2,3,4,5) -> bar(1); testbar(2,3,4,5);
```

#elif

The `#elif` command (else if) is used within an `#if ... #endif` pair. The `#elif` includes an alternative condition to test when the initial `#if` condition evaluates as `FALSE`. The preprocessor tests each `#elif` condition inside the pair and processes instructions that follow the first true `#elif`. You can have an unlimited number of `#elif` commands inside one `#if ... #end` pair.

Syntax:

```
#elif condition
```

where

condition — expression to evaluate as `TRUE` (non zero) or `FALSE` (zero).

Example:

```
#if X == 1
...
#elif X == 2
...
    /* The preprocessor includes text within the section
    if the test is true and excludes all other text
    following #elif when x!=1 and x=2. */
#else
...
#endif
```

Preprocessor Command Reference

#else

The `#else` command is used within an `#if ... #endif` pair. It adds an alternative instruction to the `#if ... #endif` pair. Only one `#else` command can be used inside the pair. The preprocessor executes instructions that follow `#else` after all the preceding conditions are evaluated as FALSE (zero). If no `#else` text is specified, and all preceding `#if` and `#elif` conditions are FALSE, the preprocessor does not include any text inside the `#if ... #endif` pair.

Syntax:

```
#else
```

Example:

```
#if X == 1
...
#elif X == 2
...
#else
...
    /* The preprocessor includes text within the section
    and excludes all other text before #else when
    x!=1 and x!=2. */
#endif
```

#endif

The `#endif` command is required to terminate `#if ... #endif`, `#ifdef ... #endif`, and `#ifndef ... #endif` pairs. Make sure that the number of `#if` commands matches the number of `#endif` commands.

Syntax:

```
#endif
```

Example:

```
#if condition
...
...
#endif
/* The preprocessor includes text within the section only
if the test is true */
```

Preprocessor Command Reference

#error

The `#error` command causes the preprocessor to raise an error. The preprocessor uses the text following the `#error` command as the error message.

Syntax:

```
#error messageText
```

where

messageText — user-defined text.

To break a long *messageText* without changing its meaning, place the backslash character (`\`) at the end of each line except for the last line.

Example:

```
#ifndef __ADSPTS201__
#error \
    MyError:\
    Expecting a ADSP-TS201 . \
    Check the Linker Description File!
#endif
```

#if

The `#if` command begins an `#if ... #endif` pair. Statements inside an `#if ... #endif` pair can include other preprocessor commands and conditional expressions. The preprocessor processes instructions inside the `#if ... #endif` pair only when *condition* that follows the `#if` evaluates as TRUE. Every `#if` command must be terminated with an `#endif` command.

Syntax:

```
#if condition
```

where

condition — expression to evaluate as TRUE (non zero) or FALSE (zero).

Example:

```
#if x!=100          /* test for TRUE condition */
...
    /* The preprocessor includes text within the section
    if the test is true and excludes all other text
    after #if only when x!=100 */
#endif
```

More examples:

```
#if (x!=100) && (y==20)
...
#endif

#if defined(__ADSPTS201__)
...
#endif
```

Preprocessor Command Reference

#ifdef

The `#ifdef` (if defined) command begins an `#ifdef ... #endif` pair and instructs the preprocessor to test whether macro is defined. The number of `#ifdef` commands must match the number of `#endif` commands.

Syntax:

```
#ifdef macroSymbol
```

where

macroSymbol — macro identifying symbol.

Example:

```
#ifdef __ADSPTS201__  
    /* Includes text after #ifdef only when __ADSPTS201__ has  
    been defined */  
#endif
```

#ifndef

The `#ifndef` (if not defined) command begins an `#ifndef ... #endif` pair and directs the preprocessor to test for an undefined macro. The preprocessor considers a macro undefined if it has no defined value. The number of `#ifndef` commands must equal the number of `#endif` commands.

Syntax:

```
#ifndef macroSymbol
```

where

`macroSymbol` — macro identifying symbol .

Example:

```
#ifndef __ADSPTS201__  
    /* Includes text after #ifndef only when __ADSPTS201__ is  
    not defined */  
#endif
```

Preprocessor Command Reference

#include

The `#include` command directs the preprocessor to insert the text from a header file at the command location. There are two types of header files: system and user. The only difference to the preprocessor between these two types of files is the way the preprocessor searches for them.

- **System Header** `<fileName>` — The preprocessor searches for a system header file in the order: (1) the directories you specify and (2) the standard list of system directories.
- **User Header** `"fileName"` — The preprocessor searches for a user header file in this order:
 1. Current directory—the directory where the source file that has the `#include` command(s) lives
 2. Directories you specify
 3. Standard list of system directories

Syntax:

```
#include <fileName> // include a system header file
#include "fileName" // include a user header file
#include macroFileNameExpansion
/* Include a file named through macro expansion.
This command directs the preprocessor to expand the
macro. The preprocessor processes the expanded text,
which must match either <fileName> or "fileName". */
```

Example:

```
#ifdef __ADSPTS201__ /* tests that __ADSPTS201__ has been defined */
#include <stdlib.h>

#endif
```

#line

The `#line` command directs the preprocessor to set the internal line counter to the specified value. Use this command for error tracking purposes.

Syntax:

```
#line lineNumber "sourceFile"
```

where

lineNumber— number of the source line that you want to output.

sourceFile — name of the source file included in double quotation marks. The *sourceFile* entry can include the drive, directory, and file extension as part of the file name.

Example:

```
#line 7 "myFile.c"
```



All assembly programs have `#line` directives after preprocessing. They always have a first line with `#line 1 "filename.asm"` and they will also have `#line` directives to establish correct line numbers for text that came from include files as a result of `#include` directives that were processed.

#pragma

The `#pragma` command is the implementation-specific command that could modify the preprocessor behavior. The `#pragma` command can take any sequence of tokens. This command is accepted for compatibility with other VisualDSP++ software tools. The `pp` preprocessor currently does not support pragmas; therefore, it will ignore any information in the `#pragma`.

Syntax:

```
#pragma any_sequence_of_tokens
```

Example:

```
#pragma disable_warning 1024
```

#undef

The `#undef` command directs the preprocessor to undefine the macro.

Syntax:

```
#undef macroSymbol
```

where

`macroSymbol` — macro created with the `#define` command.

Example:

```
#undef BUFFER_SIZE    /* undefines a macro named BUFFER_SIZE */
```

Preprocessor Command Reference

#warning

The `#warning` command is used to cause the preprocessor to issue a warning. The preprocessor uses the text following the `#warning` command as the warning message.

Syntax:

```
#warning messageText
```

where

messageText — user-defined text.

To break a long *messageText* without changing its meaning, place the backslash character (`\`) at the end of each line except for the last line.

Example:

```
#ifndef __ADSPTS201__  
#warning \  
    MyWarning: \  
    Expecting a ADSP-TS201. \  
    Check the Linker Description File!  
#endif
```

(Argument)

The # (argument) “stringization” operator directs the preprocessor to convert a macro argument into a string constant. The preprocessor converts an argument into a string when macro arguments are substituted into the macro definition.

The preprocessor handles white space in string-to-literal conversions by:

- Ignoring leading and trailing white spaces
- Converting any white space in the middle of the text to a single space in the resulting string

Syntax:

#toString

where

toString — Macro formal parameter to convert into a literal string. The # operator must precede a macro parameter. The preprocessor includes a converted string within the double quotation marks (“ ”).



This feature is “off” by default. Use the “-stringize” command-line switch ([on page 2-37](#)) to enable it.

C Code Example:

```
#define WARN_IF(EXP)\
fprintf (stderr,"Warning:">#EXP "\n")
/*Defines a macro that takes an argument and converts the
argument to a string */
WARN_IF(current <minimum);
/* Invokes the macro passing the condition.*/
fprintf (stderr,"Warning:\""current <minimum\"" "\n");
/* Note that the #EXP has been changed to current <minimum
an is enclosed in “ ” */
```

(Concatenate)

The `##` (concatenate) operator directs the preprocessor to concatenate two tokens. When you define a macro, you request concatenation with `##` in the macro body. The preprocessor concatenates the syntactic tokens on either side of the concatenation operator.

Syntax:

```
token1##token2
```

Example:

```
#define varstring(name) .VAR var_##name[] = {'name', 0};  
    varstring (error);  
    varstring (warning);  
  
/*The above code results in */  
    .VAR var_error = {'error', 0};  
    .VAR var_warning = {'warning', 0};
```

? (Generate a Unique Label)

The "?" operator directs the preprocessor to generate unique labels for iterated macro expansions. Within the definition body of a macro (`#define`), you can specify one or more identifiers with a trailing question mark (?) to ensure that unique label names are generated for each macro invocation.

The preprocessor affixes "_num" to a label symbol, where num is a uniquely generated number for every macro expansion. For example,

```
abcd? ==> abcd_1
```

If a question mark is a part of the symbol that needs to be preserved, ensure that "?" is delimited from the symbol. For example,

"abcd?" is a generated label, while "abcd ?" is not.

Example:

```
#define loop(x,y) mylabel?:x =1+1;\
x = 2+2;\
yourlabel?:y =3*3;\
y = 5*5;\
JUMP mylabel?;\
JUMP yourlabel?;\
loop (bz,kjb)
loop (lt,ss)
loop (yc,jl)

// Generates the following output:
mylabel_1: bz =1+1; bz =2+2; yourlabel_1: kjb =3*3; kjb = 5*5;
JUMP mylabel_1;
JUMP yourlabel_1;
mylabel_2: lt =1+1; lt =2+2; yourlabel_2: ss =3*3; ss =5*5;
JUMP mylabel_2;
```

Preprocessor Command Reference

```
JUMP yourlabel_2;  
mylabel_3:yc =1+1;yc =2+2;yourlabel_3:j1 =3*3;j1 =5*5;  
JUMP mylabel_3;  
  
JUMP yourlabel_3;
```

Preprocessor Command-Line Reference

The `pp` preprocessor is the first step in the process of building (assembling, and linking) your programs. The `pp` preprocessor is run before the assembler or linker. You can also run it independently from its own command line.

This section contains:

- [“Running the Preprocessor”](#)
- [“Preprocessor Command-Line Switches” on page 2-32](#)

Running the Preprocessor

To run the preprocessor from the command line, type the name of the program followed by arguments in any order.

```
pp [-switch1 [-switch2 ... ]][ sourceFile]
```

where

`pp` — name of the preprocessor program

`-switch1`, `-switch2` — switches to process. The preprocessor offers several switches that are used to select its operation and modes. Some preprocessor switches take a file name as a required parameter.

`sourceFile` — name of the source file to process. The preprocessor supports relative and absolute path names. The `pp.exe` outputs a list of command-line switches when runs without this argument.

Preprocessor Command-Line Reference

For example, the following command line

```
pp -Dfilter_taps=100 -v -o bin\p1.is p1.asm
```

runs the preprocessor with

`-Dfilter_taps=100` — defines the macro `filter_taps` as equal to 100

`-v` — displays verbose information for each phase of the preprocessing

`-o bin\p1.is` — specifies the name and directory for the intermediate preprocessed file

`p1.asm` — specifies the assembly source file to preprocess



Most switches without arguments can be negated by prepending `-no` to the switch; for example, `-nowarn` turns off warning messages, and `-nocs!` turns off omitting “!” style comments.

Preprocessor Command-Line Switches

The preprocessor is controlled through the switches (or VisualDSP++ options) of other DSP development tools, such as the compiler, assembler, and linker. Note that the preprocessor (`pp.exe`) can operate independently from the command line with its own command-line switches.

[Table 2-5](#) lists the `pp.exe` switches. A detailed description of each switch appears beginning on [page 2-33](#).

Table 2-5. Preprocessor Command-Line Switch Summary

Switch Name	Description
<code>-cprefix</code>	Enables the stringization operator
<code>-cs!</code>	Treats as a comment all text after “!” on a single line

Table 2-5. Preprocessor Command-Line Switch Summary (Cont'd)

-cs/*	Treats as a comment all text within /* */
-cs//	Treats as a comment all text after //
-cs{	Treats as a comment all text within { }
-csall	Accepts comments in all formats
-Dmacro[=definition]	Defines <i>macro</i>
-h[elp]	Outputs a list of command-line switches
-i Idirectory	Searches <i>directory</i> for included files
-M	Makes dependencies only
-MM	Makes dependencies and produces preprocessor output
-Mo filename	Specifies <i>filename</i> for the make dependencies output file
-Mt filename	Makes dependencies for the specified source file
-o filename	Outputs named object file
-stringize	Enables stringization (includes a string in double quotes)
-v[erbose]	Displays information about each preprocessing phase
-version	Displays version information for the preprocessor

-cpredef

The `-cpredef` switch directs the preprocessor to use double quotation marks rather than the default single quotes as string delimiters for the pre-defined macros that are expressed as string constants. (See [Table 2-1 on page 2-8](#) for the predefined macros).

-cs!

The `-cs!` switch directs the preprocessor to treat as a comment all text after “!” on a single line.

Preprocessor Command-Line Reference

-cs/*

The `-cs/*` switch directs the preprocessor to treat as a comment all text within `/* */`.

-cs//

The `-cs//` switch directs the preprocessor to treat as a comment all text after `/ /` on a single line.

-cs{

The `-cs{` switch directs the preprocessor to treat as a comment all text within `{ }`.

-csall

The `-csall` switch directs the preprocessor to accept comments in all formats.

-Dmacro[=def]

The `-Dmacro` switch directs the preprocessor to define a `macro`. If you do not include the optional definition string (`=def`), the preprocessor defines the macro as value 1. Similar to the C compiler, you can use the `-D` switch to define an assembly language macro.

Some examples of this switch are:

```
-Dinput                // defines input as 1
-Dsamples=10           // defines samples as 10
-Dpoint="Start"        // defines point as the string "Start"
-D_LANGUAGE_ASM=1      // defines assembly language as 1
```

-h[elp]

The `-help` switch directs the preprocessor to output to standard output the list of command-line switches with a syntax summary.

-i | Idirectory

The `-i directory` and `-I directory` switch directs the preprocessor to append the specified directory (or a list of directories separated by semicolon) to the search path for included header files (see [on page 2-22](#)).

Note that no space is allowed between `-i` or `-I` and the path name.

The preprocessor searches for included files in these order:

1. Current project (`.DPJ`) directory (where the source file lives)
2. Specified directory (a list of directories). The order of the list defines the order of multiple searches.
3. `...\include` subdirectory of the VisualDSP++ installation directory
4. Connected project directories (`.DPJ`)



Current directory is the directory where the source file lives, not the directory of the assembler program. Usage of full path names for the `-I` switch on the command line (omitting the disk partition) is recommended.

-M

The `-M` switch directs the preprocessor to output a rule (generate make rule only), which is suitable for the make utility, describing the dependencies of the source file. The output, a make dependencies list, is written to `stdout` in the standard command-line format.

“target_file”: “dependency_file.ext”

Preprocessor Command-Line Reference

where

dependency_file.ext may be an assembly source file or a header file included with the `#include` preprocessor command.

When the `-o filename` option is used with `-M`, the `-o` option is ignored. To specify an alternate target name for the make dependencies, use the `-Mt` option. To direct the make dependencies to a file, use the `-Mo` option.

-MM

The `-MM` switch directs the preprocessor to output a rule (generate make rule and preprocess), which is suitable for the make utility, describing the dependencies of the source file. The output, a make dependencies list, is written to `stdout` in the standard command-line format.

The only difference between `-MM` and `-M` actions is that the preprocessing continues with `-MM`. See “[-M](#)” for more information.

-Mo filename

The `-Mo` switch specifies the name of the make dependencies file (output make rule) that the preprocessor generates when using the `-M` or `-MM` switch. If the named file is not in the current directory, you must provide the path name in the double quotation marks (“ ”). The `-o filename` option overrides default of make dependencies to `stdout`.

-Mt filename

The `-Mt` switch specifies the name of the target file (output make rule for the named source) for which the preprocessor generates the make rule using the `-M` or `-MM` switch. The `-M filename` switch overrides the default `base.is`. See “[-M](#)” for more information.

-o filename

The `-o` switch directs the preprocessor to use the specified *filename* argument for the preprocessed assembly file. The preprocessor directs the output to `stdout` when no `-o` option is specified.

-stringize

The `-stringize` switch enables the preprocessor stringization operator. By default, this switch is off. When set, this switch turns on the preprocessor stringization functionality (see “[# \(Argument\)](#)” on page 2-27) which is by default turned off to avoid possible undesired stringization.

For example, there is a conflict between the stringization operator and the assembler’s boolean constant format in the following macro definition:

```
#define bool_const b#00000001
```

-v[erbose]

The `-v[erbose]` switch directs the preprocessor to output the version of the preprocessor program and information for each phase of the preprocessing.

-version

The `-version` switch directs the preprocessor to display the version information for the preprocessor program.



The `-version` switch on the assembler command line provides version information for both the assembler and preprocessor. The `-version` switch on the preprocessor command-line provides preprocessor version information only.

I INDEX

Symbols

- # (stringization) preprocessor operator [2-27](#)
- ## (concatenate) preprocessor operator [2-28](#)
- #define (macro) preprocessor command [2-12](#)
 - variable argument list [2-13](#)
- #elif (else if) preprocessor command [2-15](#)
- #else (alternate instruction) preprocessor command [2-16](#)
- #endif (termination) preprocessor command [2-17](#)
- #error (error message) preprocessor command [2-18](#)
- #if (test if true) preprocessor command [2-19](#)
- #ifdef (test if defined) preprocessor command [2-20](#)
- #ifndef (test if not defined) preprocessor command [2-21](#)
- #include (insert a file) preprocessor command [2-22](#)
- #line (output line number) preprocessor command [2-23](#)
- #pragma preprocessor command [2-24](#)
- #warning (warning message) preprocessor command [2-26](#)
- ... preprocessor operator [2-13](#)
- .ALIGN (address alignment) assembler directive [1-42](#)
- .ALIGN_CODE (code address alignment) assembler directive [1-44](#)
- .ELIF conditional assembly directive [1-33](#)
- .ELSE conditional assembly directive [1-33](#)
- .ENDIF conditional assembly directive [1-33](#)
- .EXTERN (global label) assembler directive [1-45](#)
- .EXTERN STRUCT assembler directive [1-46](#)
- .FILE (override filename) assembler directive [1-48](#)
- .GLOBAL (global symbol) assembler directive [1-49](#)
- .IF conditional assembly directive [1-33](#)
- .IMPORT assembler directive [1-50](#)
- .LEFTMARGIN assembler directive [1-52](#)

INDEX

- .LIST assembler directive [1-53](#)
- .LIST_DATA assembler directive [1-54](#)
- .LIST_DATFILE assembler directive [1-55](#)
- .LIST_DEFTAB assembler directive [1-56](#)
- .LIST_LOCTAB assembler directive [1-57](#)
- .LIST_WRAPDATA assembler directive [1-58](#)
- .NEWPAGE assembler directive [1-59](#)
- .NOLIST assembler directive [1-53](#)
- .NOLIST_DATA assembler directive [1-54](#)
- .NOLIST_DATFILE assembler directive [1-55](#)
- .NOLIST_WRAPDATA assembler directive [1-58](#)
- .PAGELENGTH assembler directive [1-60](#)
- .PAGEWIDTH assembly directive [1-61](#)
- .PREVIOUS assembler directive [1-62](#)
- .SECTION (start or embed a section) assembler directive [1-64](#)
- .STRUCT (struct variable) assembler directive [1-66](#)
- .TYPE (change default type) assembler directive [1-70](#)
- .VAR (data variable) assembler directive [1-71](#)
- .WEAK assembler directive [1-75](#)
- ? preprocessor operator [2-29](#)
- __DATE__ macro [2-8](#)
- __FILE__ macro [2-8](#)
- __LINE__ macro [2-8](#)
- __STDC__ macro [2-8](#)
- __TIME__ macro [2-8](#)
- __VA_ARGS__ identifier [2-14](#)
- A
 - absolute address [1-37](#)
 - address alignment [1-42](#)
 - ADI macro [2-8](#)
 - align-branch-lines assembler switch [1-81](#)
 - aligning branch instructions [1-81](#)
 - archiver [1-5](#)
 - arithmetic
 - fractional [1-32](#)
 - mixed fractional [1-32](#)
 - ASCII string initialization support [1-73](#)
 - assembler
 - command-line switch
 - align-branch-lines [1-81](#)
 - char-size-32 [1-82](#)
 - char-size-8 [1-82](#)
 - char-size-any [1-82](#)
 - D (define macro) [1-83](#)
 - D option [1-84](#)
 - default-branch-np [1-82](#)
 - default-branch-p [1-83](#)

- double-size-32 [1-83](#)
- double-size-64 [1-83](#)
- double-size-any [1-84](#)
- flags-compiler [1-84](#)
- flags-pp [1-85](#)
- g (generate debug info) [1-85](#)
- h (help) [1-85](#)
- i (include path) [1-85](#)
- l (listing) switch [1-86](#)
- li (listing with include) switch [1-86](#)
- M (make rule only) [1-87](#)
- MM (make rule and assemble) [1-88](#)
- Mo (output make rule) [1-88](#)
- Mt (make rule for named file) [1-87](#)
- o (output) [1-88](#)
- pp (proceed with preprocessing) [1-89](#)
- proc processorID [1-89](#)
- sp (skip preprocessing) [1-89](#)
- v (verbose) [1-90](#)
- version (display version) [1-90](#)
- w (skip warning messages) [1-90](#)
- wnumber (warning suppression) [1-90](#)
- command-line syntax [1-77](#)
- directive syntax [1-6](#), [1-39](#)
- expressions, constant and address [1-27](#)
- feature macros [1-15](#)
- file extensions [1-78](#)
- instruction set [1-5](#)
- keywords [1-19](#)
- numeric bases [1-30](#)
- operator precedence [1-28](#)
- predefined macros [1-15](#)
- program content [1-5](#)
- run-time environment [1-2](#)
- source files
 - (.ASM) [1-3](#)
 - symbols [1-25](#)
- assembler directives
 - .ALIGN [1-42](#)
 - .ALIGN_CODE [1-44](#)
 - .EXTERN [1-45](#)
 - .EXTERN STRUCT [1-46](#)
 - .FILE (override filename) [1-48](#)
 - .GLOBAL [1-49](#)
 - .IMPORT [1-50](#)
 - .LEFTMARGIN [1-52](#)
 - .LIST [1-53](#)
 - .LIST_DATA [1-54](#)
 - .LIST_DATFILE [1-55](#)
 - .LIST_DEFTAB [1-56](#)
 - .LIST_LOCTAB [1-57](#)
 - .LIST_WRAPDATA [1-58](#)
 - .NEWPAGE [1-59](#)
 - .NOLIST [1-53](#)
 - .NOLIST_DATA [1-54](#)
 - .NOLIST_DATFILE [1-55](#)
 - .NOLIST_WRAPDATA [1-58](#)
 - .PAGELength [1-60](#)
 - .PAGEWIDTH [1-61](#)
 - .PREVIOUS [1-62](#)
 - .SECTION [1-64](#)
 - .STRUCT [1-66](#)

INDEX

.TYPE 1-70
.VAR 1-71
.WEAK 1-75
conditional 1-33
assembly language constant 2-34

B

backslash character () 2-12
branch instructions 1-81
branch lines default to NP 1-82
built-in functions
 offsetof() 1-35
 sizeof() 1-36

C

C and assembly, interfacing 1-12
CHAR32 section qualifier 1-64
CHAR8 section qualifier 1-64
CHARANY section qualifier 1-64
-char-size-32 assembler switch 1-82
-char-size-8 assembler switch 1-82
-char-size-any assembler switch
 1-82
circular buffers
 setting 1-29
comma-separated option 1-85
concatenate (##) preprocessor
 operator 2-28
conditional assembly directives
 .ELIF 1-33
 .ELSE 1-33
 .ENDIF 1-33
 .IF 1-33
constant expression 1-27

conventions
 comment strings 1-33
 file extensions 1-78
 file names 1-77
 numeric formats 1-30
 user-defined symbols 1-25
-cpredef (C-style definitions)
 preprocessor switch 2-33
-cs! ("!" comment style)
 preprocessor switch 2-33
-cs/* ("/* */" comment style)
 preprocessor switch 2-34
-cs// ("//" comment style)
 preprocessor switch 2-34
-cs{ ("{" comment style)
 preprocessor switch 2-34
-csall (all comment styles)
 preprocessor switch 2-34
custom processors 1-89

D

-D (define macro) assembler switch
 1-83
-D (define macro) preprocessor
 switch 2-34
-D (defines) command-line option,
 see -flags-compiler switch 1-84
-D__ADSPTS__ macro 1-16, 2-8
-D__ADSPTS101__ macro 1-16,
 2-8
-D__ADSPTS201__ macro 1-16,
 2-8
-D_LANGUAGE_ASM macro
 1-16, 2-8

- D_LANGUAGE_C macro [1-16](#), [2-8](#)
- default defines [1-84](#)
- default symbol type [1-70](#)
- default tab width [1-56](#), [1-57](#)
- default-branch-np assembler switch [1-82](#)
- default-branch-p assembler switch [1-83](#)
- defines options [1-84](#)
- defining
 - a macro [2-12](#)
- directives
 - assembler [1-39](#)
- DOUBLE32 section qualifier [1-64](#)
- DOUBLE64 section qualifier [1-64](#)
- DOUBLEANY section qualifier [1-64](#)
- double-size-32 assembler switch [1-83](#)
- double-size-64 assembler switch [1-83](#)
- double-size-any assembler switch [1-84](#)

E

- ELF.h header file [1-65](#)
- expressions
 - address [1-27](#)
 - constant [1-27](#)

F

- feature assembler macros
 - D__ADSPTS__ [1-16](#)

- D__ADSPTS101__ [1-16](#)
- D__ADSPTS201__ [1-16](#)
- D_LANGUAGE_ASM [1-16](#)
- feature preprocessor macros
 - D__ADSPTS__ [2-8](#)
 - D__ADSPTS101__ [2-8](#)
 - D__ADSPTS201__ [2-8](#)
 - D_LANGUAGE_ASM [2-8](#)
 - D_LANGUAGE_C [2-8](#)
- file extensions
 - .ASM (assembly source) [1-3](#)
 - .DAT (data file) [1-3](#)
 - .DLB (library file) [1-4](#)
 - .DOJ (object file) [1-3](#)
 - .H (header file) [1-3](#)
 - .IS (preprocessed assembly file) [1-89](#)
- file formats
 - ELF (Executable and Linkable Format) [1-3](#)
- files
 - extensions [1-78](#)
 - naming conventions [1-77](#)
- flags-compiler assembler switch [1-84](#)
- flags-pp assembler switch [1-85](#)
- formats
 - numeric [1-30](#)
- fractional constants [1-32](#)
- fracts
 - 1.0r special case [1-32](#)
 - 1.15 format [1-31](#)
 - 1.31 format [1-31](#)
 - constants [1-30](#)

INDEX

mixed type arithmetic [1-32](#)
signed values [1-30](#)
using /R32 qualifier [1-31](#)

G

-g (generate debug info) assembler switch [1-85](#)
generating
 unique labels [2-29](#)
global substitutions [2-4](#)

H

-h (help) assembler switch [1-85](#), [2-35](#)
header files [2-4](#)
 system [2-4](#)
 user [2-5](#)

I

-i (include directory) preprocessor switch [2-35](#)
-i (include path) assembler switch [1-85](#)
IMPORT header files [1-50](#)
IMPORT headers
 make dependencies [1-17](#)
include files
 system header files [2-4](#)
 user header files [2-4](#)
input section alignment instruction [1-42](#)
instruction set [1-5](#)

L

-l (listing) assembler switch [1-86](#)
-li (listing with include) assembler switch [1-86](#)
linker [1-5](#)
Linker Description File [1-7](#)
LIST_DEFTAB assembler directive [1-56](#)
LIST_LOCTAB assembler directive [1-57](#)
listing files
 address [1-18](#)
 assembly process information [1-5](#)
 assembly source code [1-18](#)
 C data structure information [1-5](#)
 data initialization [1-55](#)
 data opcodes [1-54](#)
 large opcodes [1-58](#)
 line number [1-18](#)
 named [1-86](#)
 opcode [1-18](#)
 producing [1-4](#)
listing files (.LST) [1-5](#), [1-18](#)
local tab width [1-56](#), [1-57](#)
long-form initialization [1-66](#), [1-67](#)

M

-M (make rule only) assembler switch [1-87](#)
-M (make rule only) preprocessor switch [2-35](#)
macros
 assembler feature [1-15](#)
 defining with variable length

- argument list [2-13](#)
- feature assembler [1-15](#)
- feature preprocessor [2-7](#), [2-8](#)
- predefined preprocessor [2-7](#), [2-8](#)
- preprocessor feature [2-7](#)
- writing [2-5](#)
- make dependencies [1-50](#)
- memory
 - types [1-7](#)
- memory sections
 - declaring [1-64](#)
- MM (make rule and assemble)
 - assembler switch [1-87](#)
- MM (make rule and assemble)
 - preprocessor switch [2-36](#)
- Mo (output make rule) assembler switch [1-88](#)
- Mo (output make rule)
 - preprocessor switch [2-36](#)
- Mt (output make rule for named file) assembler switch [1-88](#)
- Mt preprocessor switch [2-36](#)

N

- nested struct references [1-37](#)
- numeric formats [1-30](#)

O

- o (output) assembler switch [1-88](#)
- o (output) preprocessor switch [2-37](#)
- object files
 - .DOJ extension [1-5](#)
 - producing [1-4](#)

- offsetof() built-in function [1-35](#)

P

- pp (proceed with preprocessing)
 - assembler switch [1-89](#)
- predefined preprocessor macros
 - __DATE__ [2-8](#)
 - __FILE__ [2-8](#)
 - __LINE__ [2-8](#)
 - __STDC__ [2-8](#)
 - __TIME__ [2-8](#)
- ADI [2-8](#)
- preprocessed
 - assembly files [2-10](#)
 - source file [2-10](#)
- preprocessing
 - a program [1-14](#)
- preprocessor
 - command syntax [2-10](#)
 - command-line switches [2-32](#)
 - cpredef [2-33](#)
 - cs! [2-33](#)
 - cs/* ("/* */" comment style) [2-34](#)
 - cs// ("//" comment style) [2-34](#)
 - cs{ ("{" comment style) [2-34](#)
 - csall (all comment styles) [2-34](#)
 - D (define macro) [2-34](#)
 - h (help) [2-35](#)
 - i (include path) [2-35](#)
 - M (make rule only) [2-35](#)
 - MM (make rule and assemble) [2-36](#)
 - Mo (output make rule) [2-36](#)

INDEX

- Mt (output make rule for
 named file) [2-36](#)
- o (output) [2-37](#)
- stringize [2-37](#)
- v (verbose) [2-37](#)
- version (display version) [2-37](#)
- command-line syntax [2-31](#)
- commands [1-6](#), [2-3](#)
 - list of [2-10](#)
- compiler [2-2](#)
- feature macros [2-8](#)
- global substitutions [2-4](#)
- guide [2-2](#)
- option settings [2-9](#)
- overview [2-1](#)
- predefined macros [2-8](#)
- system header file [2-22](#)
- user header file [2-22](#)
- preprocessor commands [2-10](#)
 - `#define` [2-12](#)
 - `#elif` [2-15](#)
 - `#else` [2-16](#)
 - `#endif` [2-17](#)
 - `#error` [2-18](#)
 - `#if` [2-19](#)
 - `#ifdef` [2-20](#)
 - `#ifndef` [2-21](#)
 - `#include` [2-22](#)
 - `#line` (counter) [2-23](#)
 - `#pragma` [2-24](#)
 - `#undef` [2-25](#)
 - `#warning` [2-26](#)
- preprocessor operators
 - `#` (stringization) [2-27](#)

- `##` (concatenate) [2-28](#)
- `?` (generate unique label) [2-29](#)
- proc (target processor) assembler
 switch [1-89](#)
- programs
 - assembling [1-3](#)
 - content [1-5](#)
 - listing files [1-18](#)
 - preprocessing [1-14](#)
 - structure [1-7](#)
 - writing assembly [1-3](#)
- project settings
 - assembler [1-90](#)
 - preprocessor [1-14](#), [2-9](#)

R

- R32 qualifier [1-31](#)
- relational expressions [1-34](#)
- relational operators [1-28](#)
- RESOLVE() command [1-71](#)

S

- section
 - name symbol [1-65](#)
 - qualifiers [1-64](#)
 - type identifier [1-65](#)
- sectionTypes identifier [1-65](#)
- settings
 - assembler options [1-90](#)
 - from command line [1-76](#)
 - from VisualDSP++ IDDE [1-91](#)
 - default tab width [1-56](#)
 - local tab width [1-57](#)
 - preprocessor options

- from command line 2-9
 - from VisualDSP++ IDDE 2-9
 - through build tools 2-9
- short-form initialization 1-66
- SHT_PROGBITS identifier 1-65
- sizeof() built-in function 1-36
- source files
 - (.ASM) 1-3
- sp (skip preprocessing) assembler switch 1-89
- special characters
 - dot 1-25
- stringization operator 2-27, 2-37
- stringize (double quotes)
 - preprocessor switch 2-37
- struct references 1-37
 - nested 1-37
- STT_* symbol type 1-70
- STT_OBJECT symbol type 1-70
- switches (see assembler
 - command-line switches)
- switches (see preprocessor
 - command-line switches)
- symbol
 - conventions 1-25
 - types 1-70
- symbolic expressions 1-27
- symbols (see assembler symbols)
- syntax
 - assembler command line 1-77
 - assembler directives 1-39
 - constants 1-27
 - instruction set 1-5
 - macro 2-5

- preprocessor command 2-10
- system header files 2-4

T

- tab
 - characters 1-56
 - characters in source file 1-57

U

- undef (undefine) preprocessor
 - command 2-25
- unique labels 2-29
- user header files 2-4

V

- v (verbose) assembler switch 1-90
- v (verbose) preprocessor switch 2-37
- variable length argument list 2-13
- version (display version) assembler switch 1-90
- version (display version)
 - preprocessor switch 2-37
- VisualDSP++
 - assembler settings 1-91
 - assembling from 1-3
 - preprocessor settings 2-9
 - Project Options dialog box 1-19

W

- w (skip warning messages)
 - assembler switch 1-90
- weak symbol binding 1-75

INDEX

-wnumber (warning suppression)
 assembler switch [1-90](#)
wrapping

 opcode listings [1-58](#)
writing
 assembly programs [1-3](#)

