

## CrossCore® Embedded Studio 1.0.1.2 Patch Release Note

---

CrossCore® Embedded Studio version 1.0.1.2 is a patch release for CrossCore® Embedded Studio 1.0.1. It includes USB Device Controller driver fixes specific to the ADSP-BF609, ADSP-BF548, ADSP-BF527 and ADSP-BF526 family processors. The documentation for the controller driver has been updated and is included as part of this patch release.

This patch release is required by Analog Device's  $\mu$ C/USB Device™ Stack for CrossCore Embedded Studio version 1.0.1 product.

The CCES 1.0.1.2 patch release is a cumulative patch and includes the functionality included in the CCES 1.0.1.1 patch release.

## Patch Utility Invocation

---

It is recommended that CrossCore® Embedded Studio is closed prior to applying the patch.

The patch utility will check for CrossCore® Embedded Studio v.1.0.1. If this version is not detected an error message will be generated and the patch utility will exit.

The patch can also be installed over CrossCore® Embedded Studio v.1.0.1.1.

The patch utility will overwrite existing files. A backup is not created by the patch utility. If a patched file has been modified and you wish to preserve the changes made you will need to create a backup of the file before applying the patch.

After the patch has been applied you will see "version 1.0.1.2" in the CrossCore® Embedded Studio splash screen each time it is started. You will also be able to see 1.0.1.2 in the CrossCore® Embedded Studio "About" page.

Uninstalling the patch will remove the patch from the installation database, but it will not remove the patched files.

There is no patch installation log generated by default. If you encounter patch installation issues, please contact technical support.

## Support and Assistance

---

Submit your questions online at:

<http://www.analog.com/support>

E-mail your Processor and DSP software and development tools questions from within CrossCore Embedded Studio:

[processor.tools.support@analog.com](mailto:processor.tools.support@analog.com)

E-mail your Processors and DSP applications and processor questions to:

[processor.support@analog.com](mailto:processor.support@analog.com) OR  
[processor.china@analog.com](mailto:processor.china@analog.com) (Greater China support)

Post your questions in the Processors and DSP online technical support community in Engineer Zone at:

<http://ez.analog.com/community/dsp>